




1

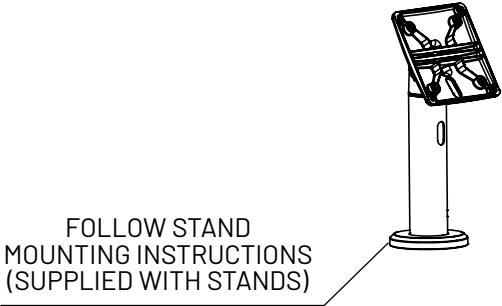


Or

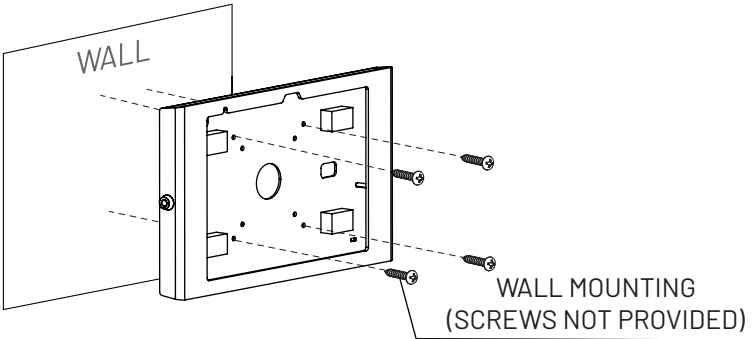


2

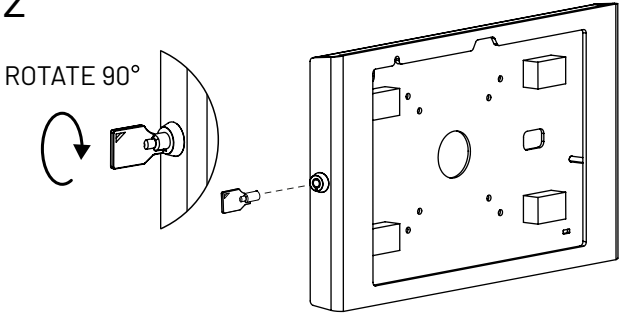


3

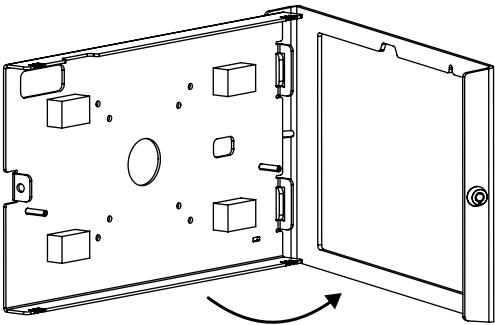


4

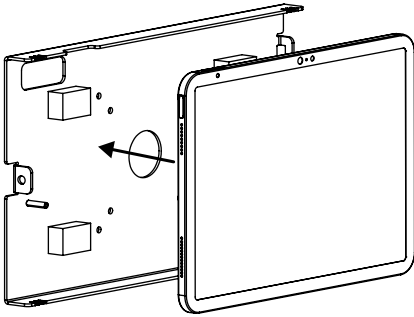



5

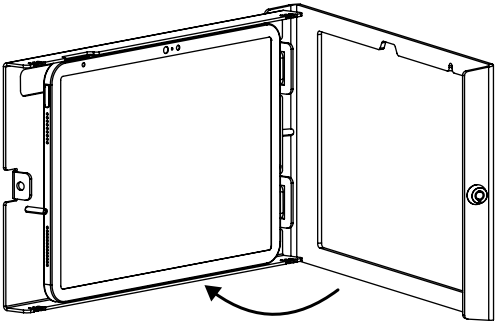

6

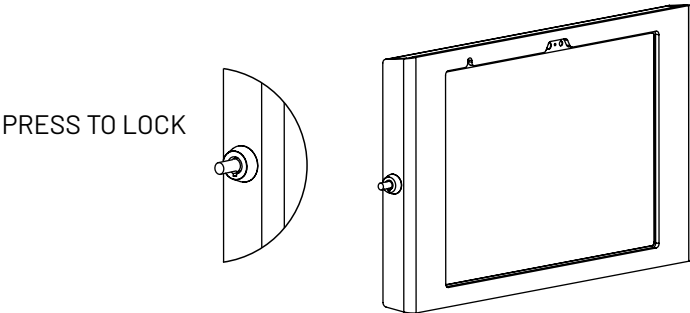


IN THE BOX

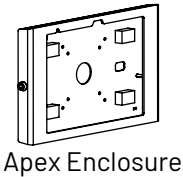


Through Stand Cable Assembly

1

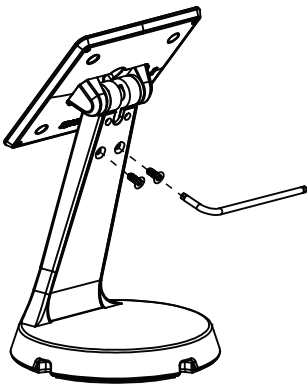


REMOVE FRONT COVER.
USE T-20 TORX
WRENCH (PROVIDED)
TO REMOVE M4 X 10mm
TORX FLAT HEAD SCREWS

2

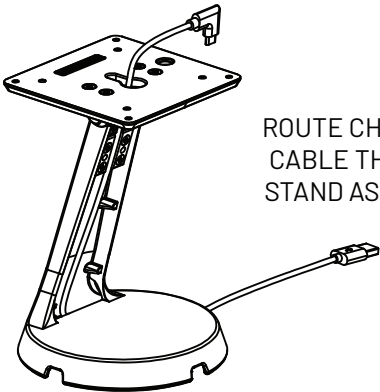


ROUTE CHARGING
CABLE THROUGH
STAND AS SHOWN

3

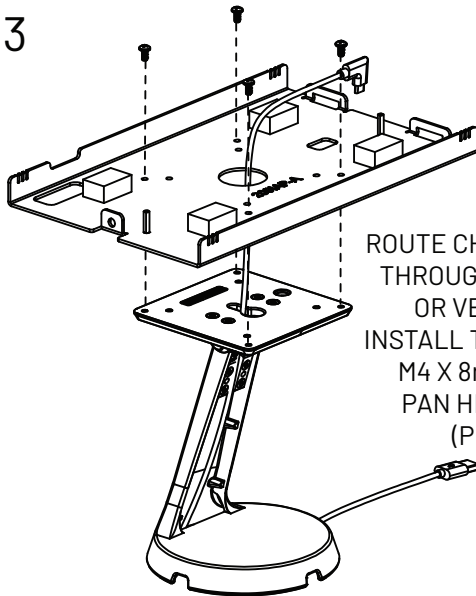


ROUTE CHARGING CABLE
THROUGH ENCLOSURE
OR VESA MOUNT.
INSTALL TO STAND USING
M4 X 8mm PHILLIPS
PAN HEAD SCREWS
(PROVIDED)

4

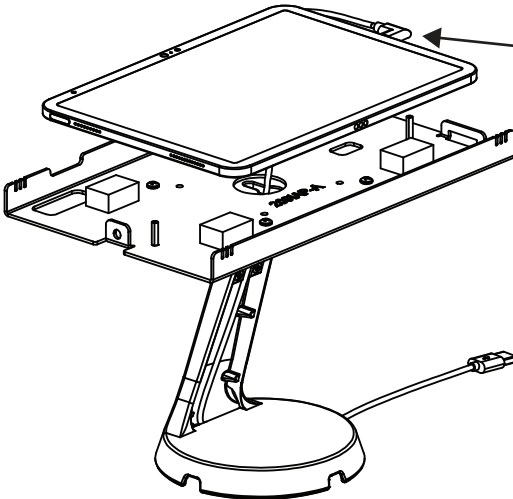


ATTACH CHARGING CABLE
TO TABLET, LEAVE A SMALL LOOP
OF CABLE BENEATH THE TABLET

5

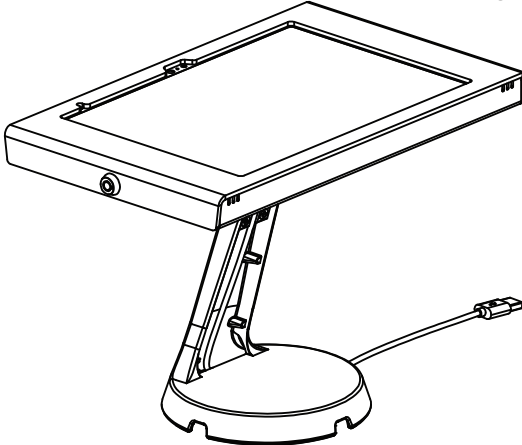


INSTALL THE REST OF THE ENCLOSURE
OR VESA MOUNT
PER THEIR INSTRUCTIONS

6

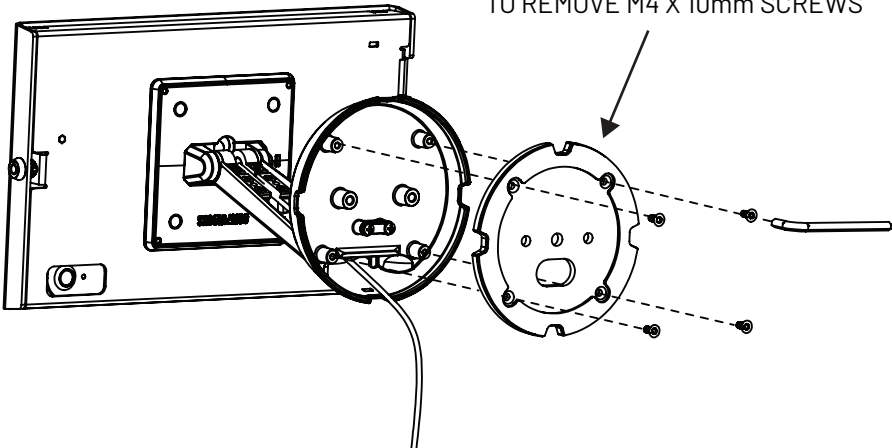

REMOVE BOTTOM PLATE.
USE T-20 TORX WRENCH (PROVIDED)
TO REMOVE M4 X 10mm SCREWS


7

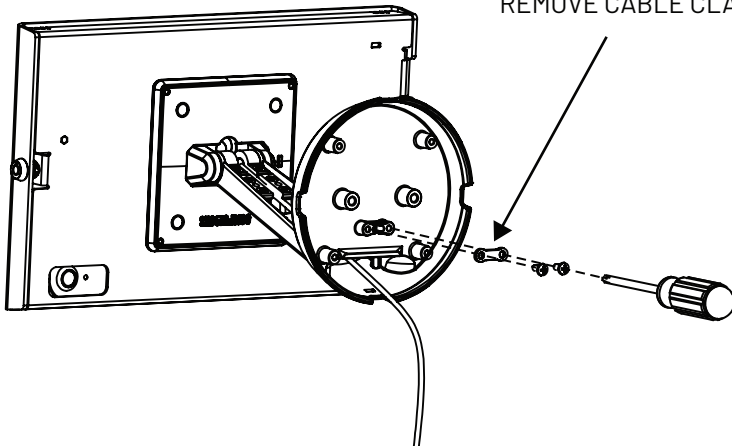

REMOVE CABLE CLAMP

8


ROUTE CHARGING CABLE
THROUGH CLAMP AREA

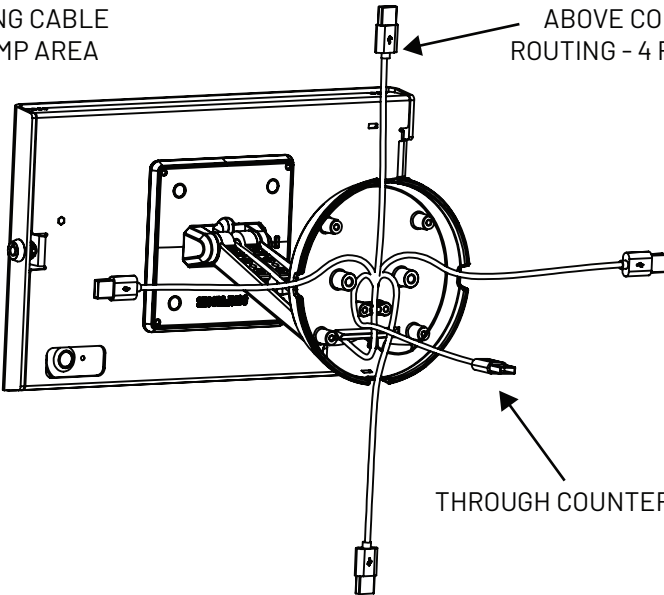

ABOVE COUNTER
ROUTING - 4 POSITIONS



THROUGH COUNTER ROUTING

9

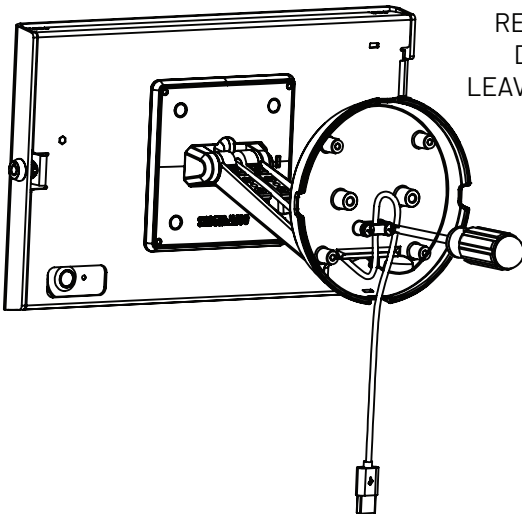


REINSTALL CABLE CLAMP
DO NOT OVER TIGHTEN
LEAVE SLACK IN POWER CORD
BELOW CLAMP

10 Securing Stand Using Cable Lock

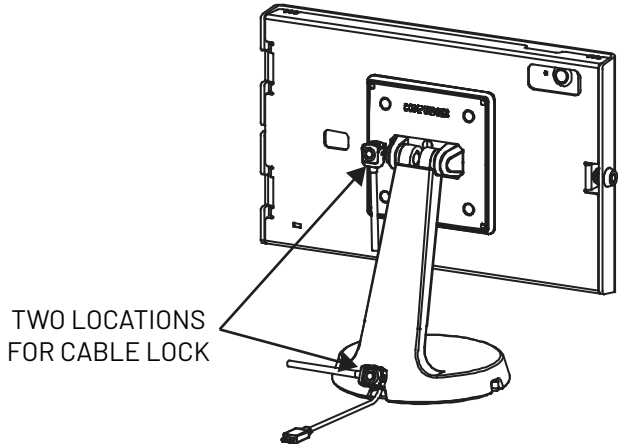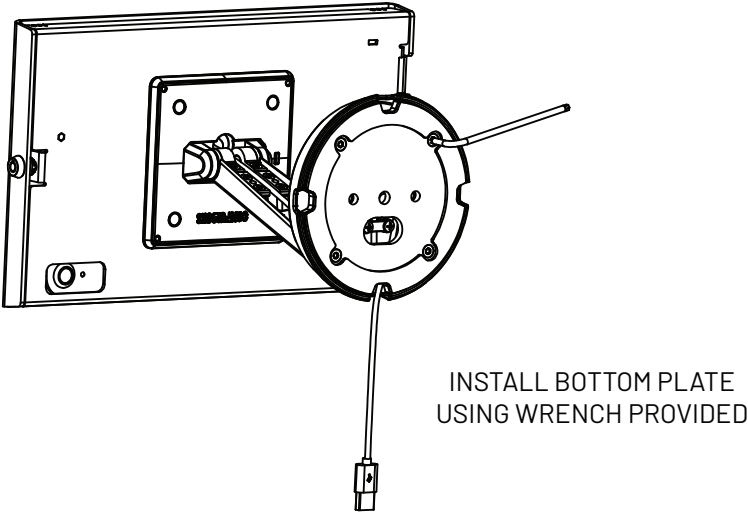


TWO LOCATIONS FOR CABLE LOCK



11

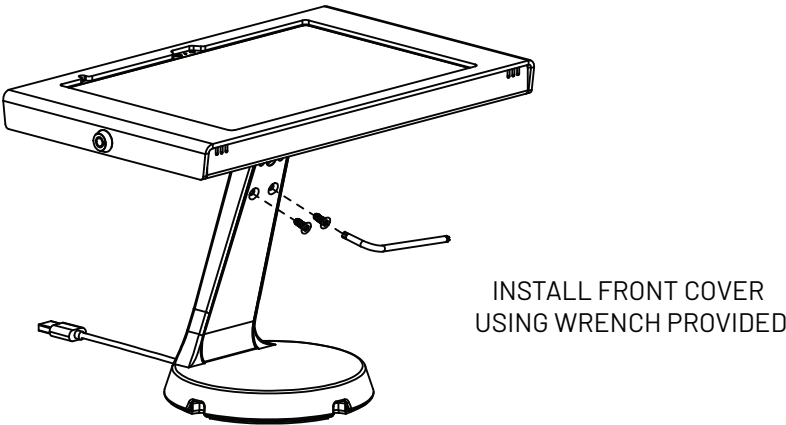



Tilt Tension Adjustment

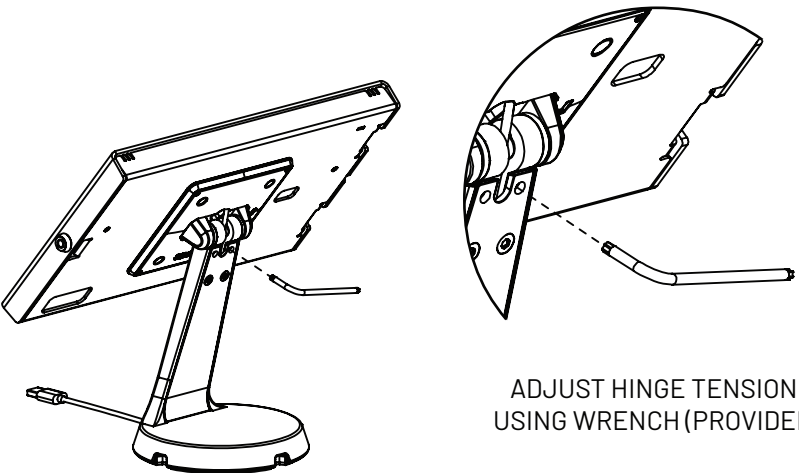

Secure Counter Mounting

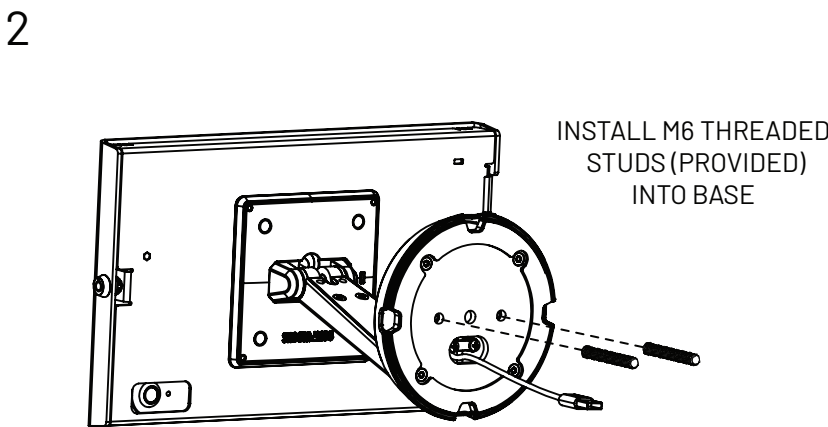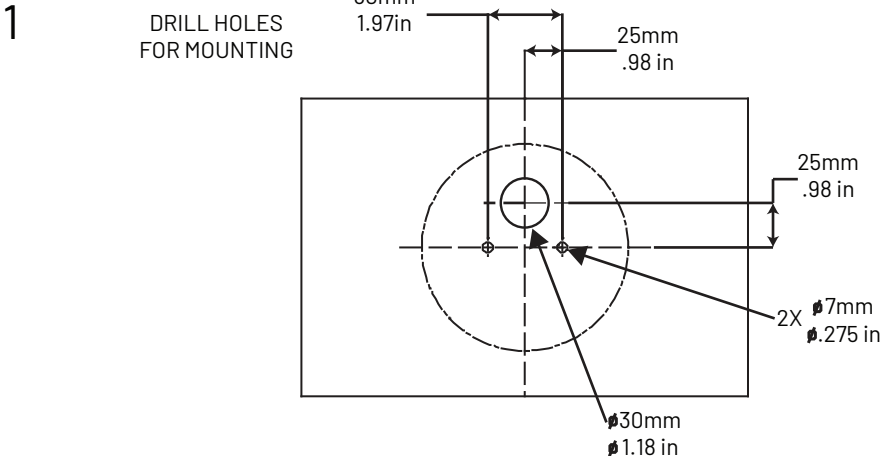

3 75mm VESA Mounting

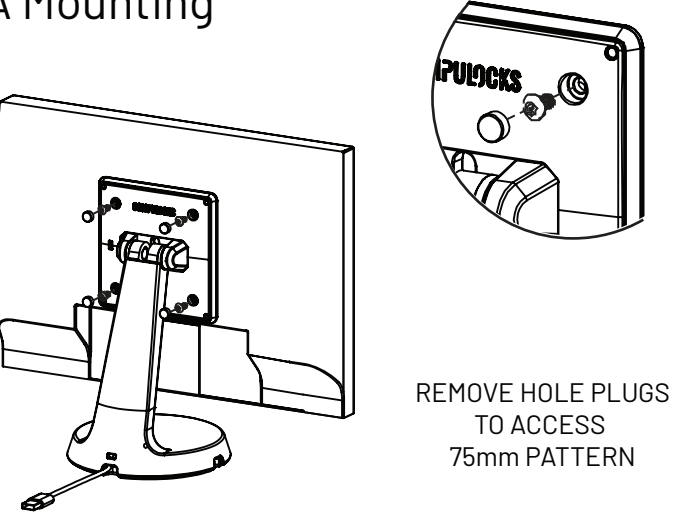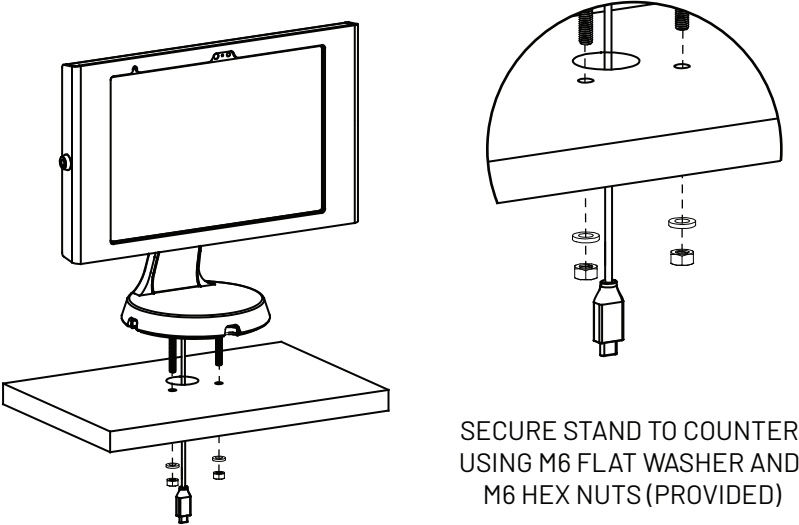

IN THE BOX



T20 TORX L-Wrench



M6 X 65mm Threaded Stud




M6 Flat Washer



M6-1mm Hex Nut



M4 X 8mm
Phillips Pan Head Screw



Stand

Hardware Kit