




1

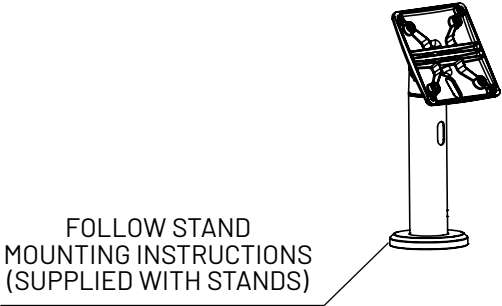


Or

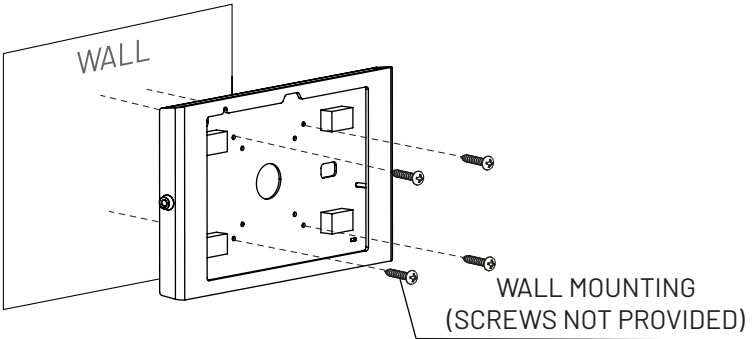


2

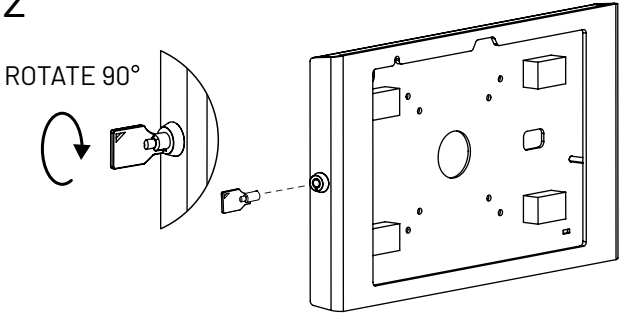


3

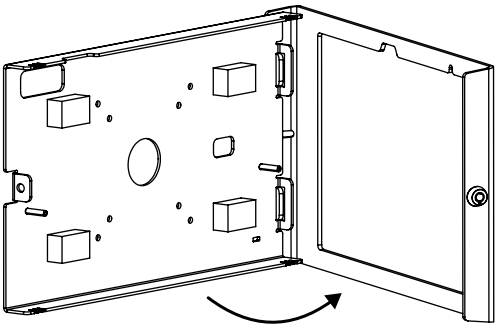


4

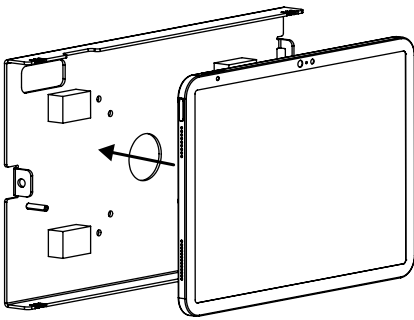



5

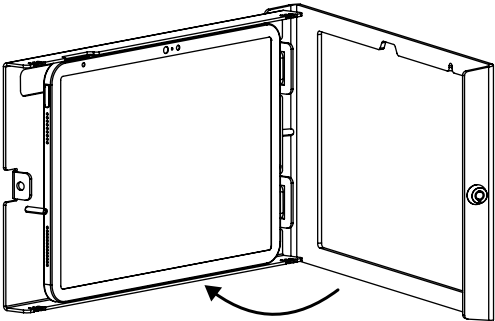

6

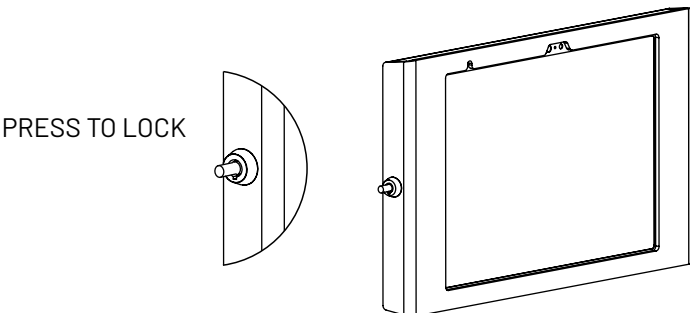


IN THE BOX

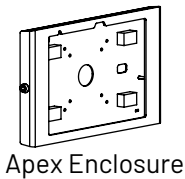


## Through Mount Cable Assembly


1

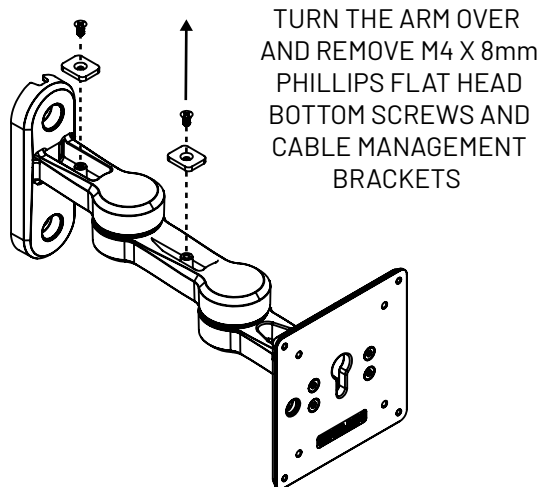

2

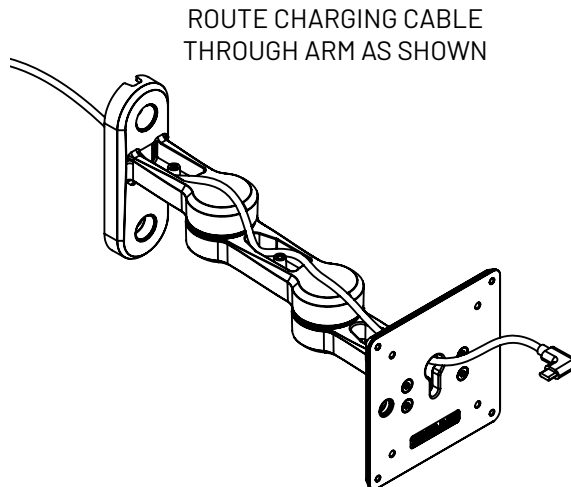


3

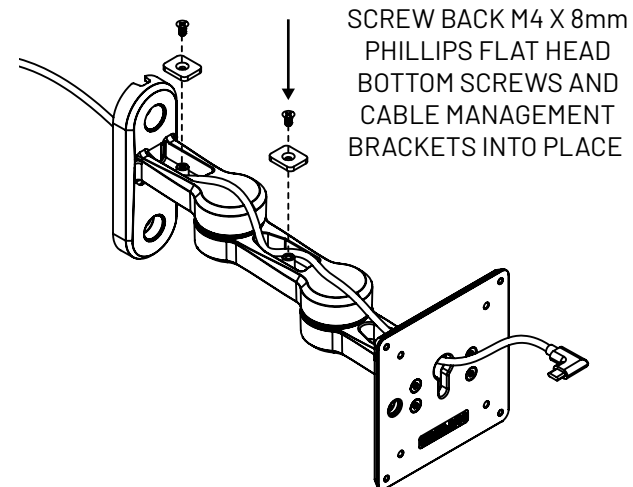


4

ADJUST CABLE LENGTH

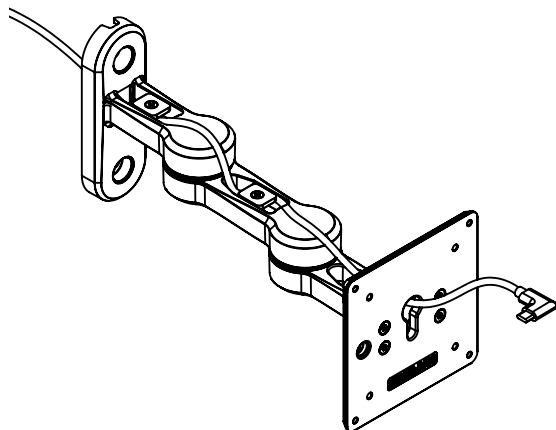


5

TURN THE ARM BACK OVER AND ROUTE  
CHARGING CABLE OUT OF THE ARM  
**OR** THROUGH THE WALL

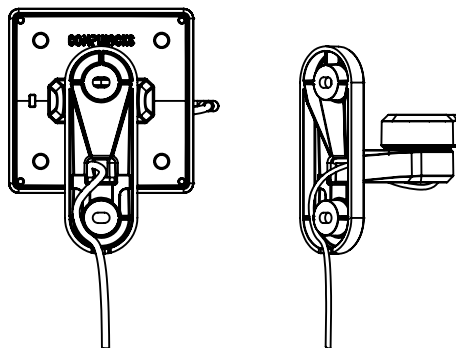


6

INSTALL THE ARM ONTO THE WALL USING  
M5 X 40mm PHILLIPS PAN HEAD SCREWS (PROVIDED)  
**TOP SCREW FIRST AND THEN THE BOTTOM SCREW**  
AND THEN PLACE SCREW CAPS

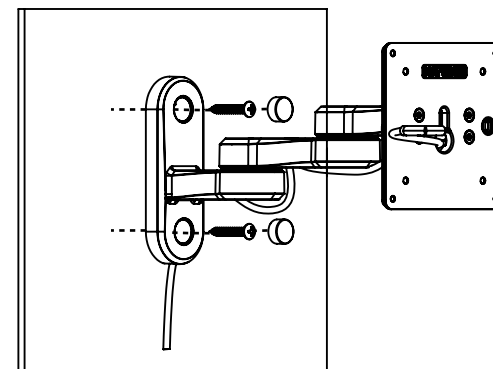


**NOTE: WALL MOUNTING TO STUDS OR CONCRETE WALL**


- 7** ROUTE CHARGING CABLE INTO THE ENCLOSURE OR UNIVERSAL VESA MOUNT. INSTALL ENCLOSURE/VESA MOUNT TO THE ARM USING M4 X 8mm PHILLIPS PAN HEAD SCREWS (PROVIDED)

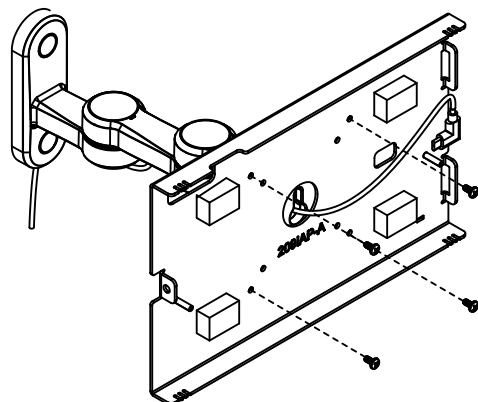

- 8** ATTACH CHARGING CABLE TO TABLET, LEAVING A SMALL LOOP OF CABLE BENEATH THE TABLET


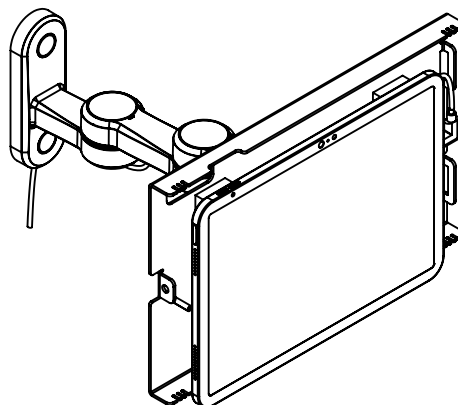


- 9** INSTALL THE ENCLOSURE TOP PLATE/VESA MOUNT PER THEIR INSTRUCTIONS

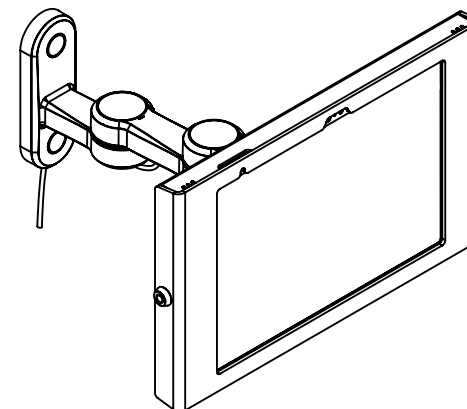

## Tilt Tension Adjustments

ADJUST HINGE TENSION  
USING WRENCH (PROVIDED)

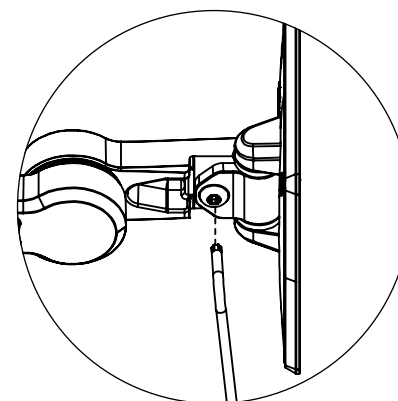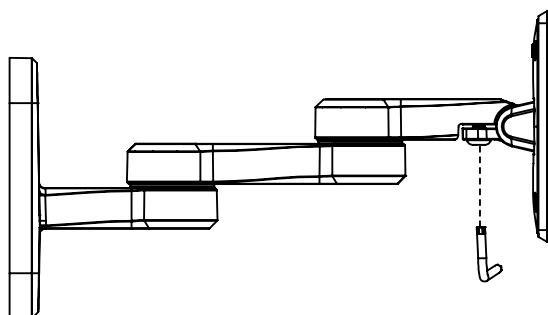

## IN THE BOX




T25 TORX L-Wrench



Cable Management  
Brackets



Rubber Screw Caps




M5 X 40mm  
Phillips Pan Head  
Screws



M4 X 8mm  
Phillips Pan Head  
Screws



M4 X 8mm  
Phillips Flat Head  
Screws

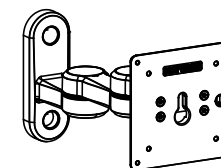

Swing Arm