


Instructions For Installing Shelves:

in Narcotic Control and Wall Storage Cabinets.

All Models

Insert top tab of bracket into rectangular hole at desired height. When top tab is seated, guide the bottom tab up toward the next lower hole, snapping it into place. Place shelf on brackets.

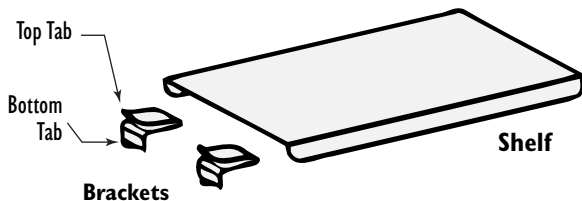

MANUFACTURERS OF **BEAM**® PRODUCTS
OMNIMED INC.®

Note: After positioning cabinet for left or right hinge, mount top.