



1

TIGHTEN VESA MOUNTING
PLATE AT 90°

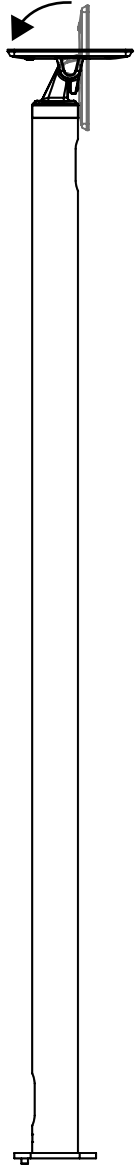


2

TURN STAND ONTO VESA
MOUNTING PLATE AND PLACE ON FLAT SURFACE.
PLACE BOTTOM PLATE
AND ALIGN WITH HOLE USING LOCATOR PIN

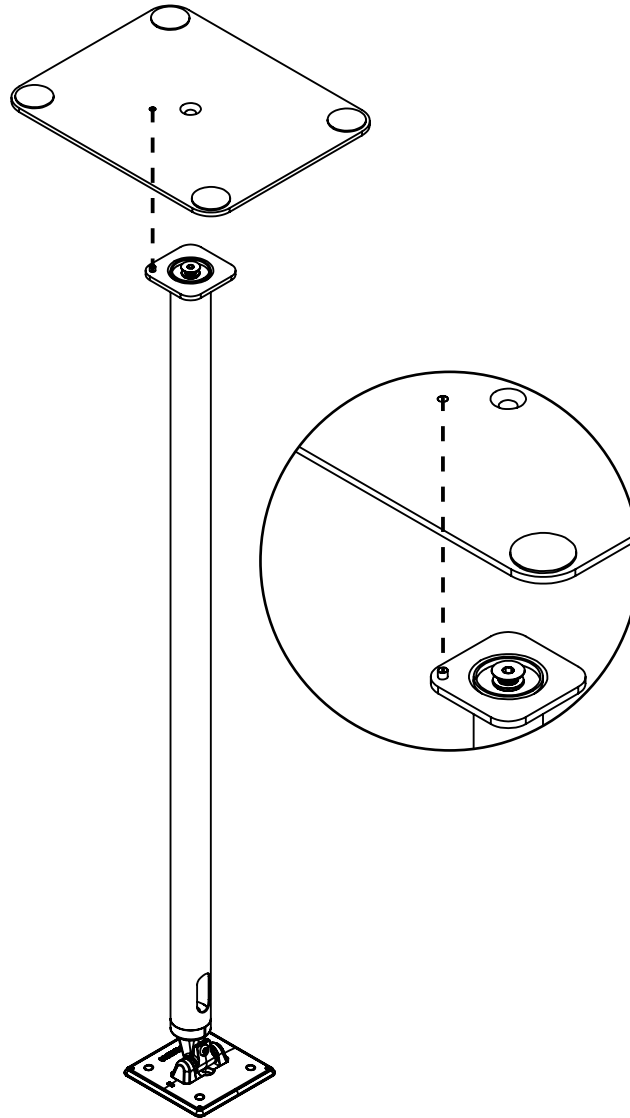


3


INSTALL THE BOTTOM PLATE USING M10 X 25mm
CONICAL ALLEN SCREW (PROVIDED)
AND 6mm ALLEN WRENCH (PROVIDED)

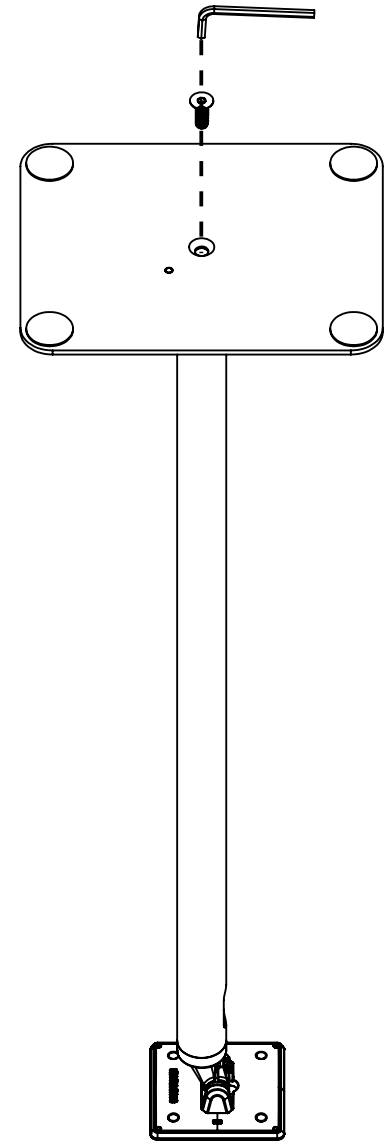


4 Free Standing or Floor Mounting

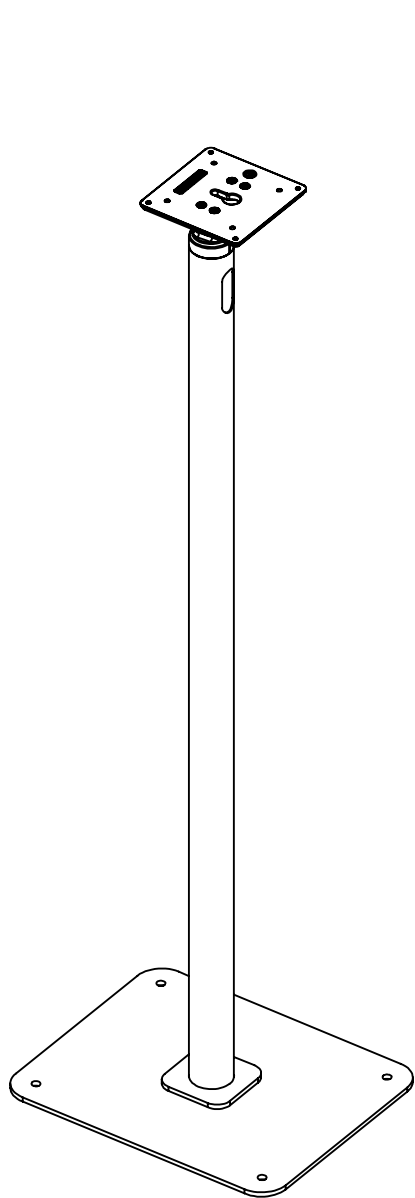

REMOVE RUBBER PLUGS

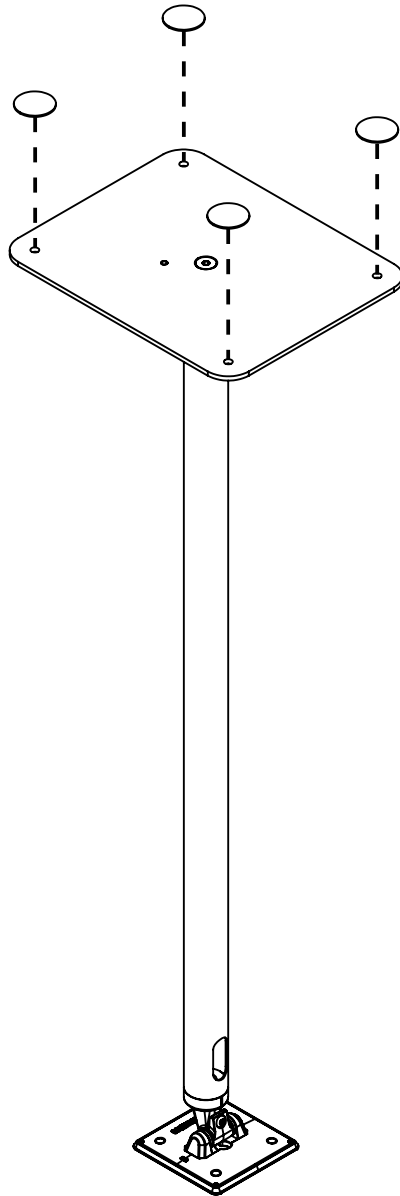


SCREW BOTTOM PLATE TO THE FLOOR
(SCREWS NOT PROVIDED)

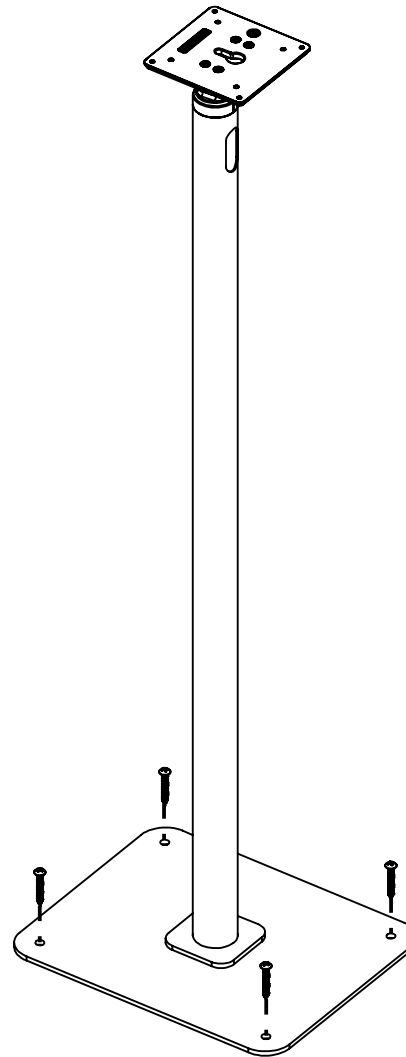

5

ROUTE CHARGING CABLE
THROUGH THE STAND AS SHOWN

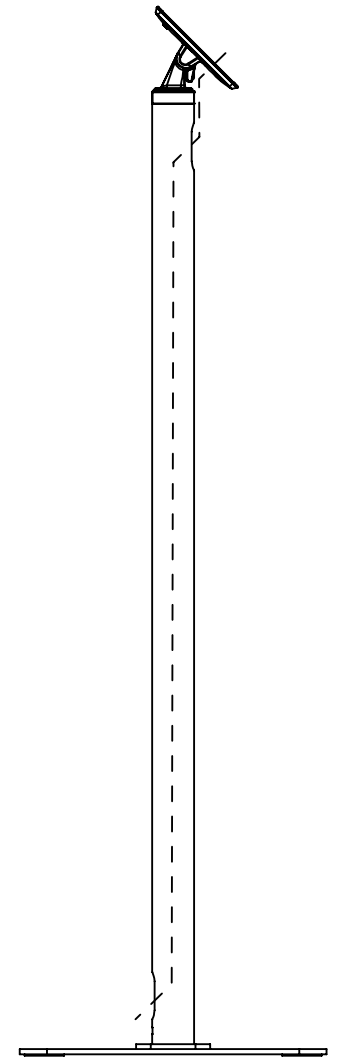

- 6

INSTALL ENCLOSURE/VESA MOUNT
TO STAND USING M4 X 8mm
PHILLIPS PAN HEAD SCREWS (PROVIDED)
- 7

INSTALL THE ENCLOSURE TOP
PLATE/VESA MOUNT PER
THEIR INSTRUCTIONS

Tilt Tension
Adjustments

In The Box

ADJUST HINGE
TENSION USING
T30 TORX
L-WRENCH
(PROVIDED)

- 

M4 X 8mm
Phillips Pan Head
Screws
- 


T30 TORX L-Wrench

- 


M10 X 25mm
Conical Allen
Screw

- 

6mm Allen Wrench

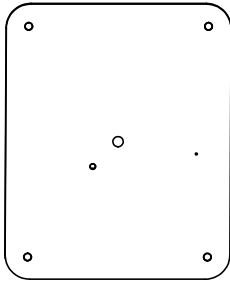

Bottom Plate



Swift Pole

VESA 100x100 to 200x200 Adapter

SKU:VESA200ADPB


Assembly Instructions

COMPULOCKS

1


PLACE TWO PARTS OF VESA 200 ADAPTER ONTO THE VESA 100 PLATE OF YOUR STAND.

*NOTE: POSITION THE ADAPTER SO THE ANGLED SCREW HOLES FACE OUTWARD TOWARD YOU.

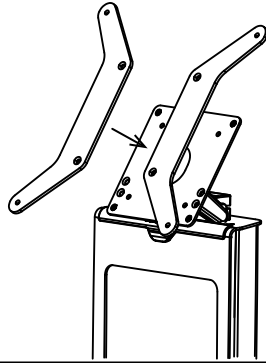


2

USE M4 7 X 10mm PHILLIPS FLAT HEAD SCREWS (PROVIDED) TO SECURE VESA 200 ADAPTER TO VESA 100 PLATE OF YOUR STAND.

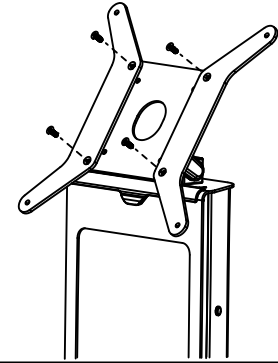


3

PLACE SCREEN ONTO VESA 200 ADAPTER.

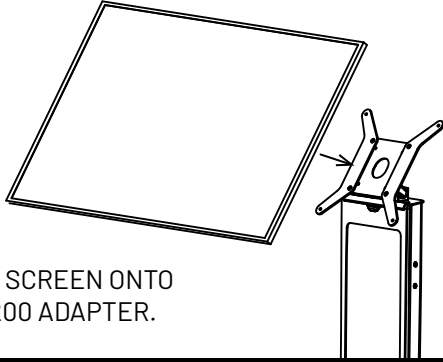


4




SECURE SCREEN FROM BEHIND USING M4 7 X 10mm PHILLIPS PAN HEAD SCREWS (PROVIDED).

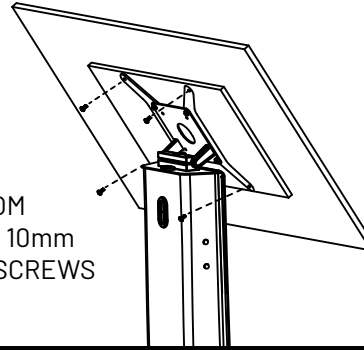

5

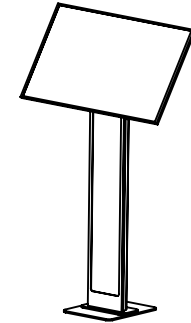

FITS VESA 100*100 MOUNT STANDS

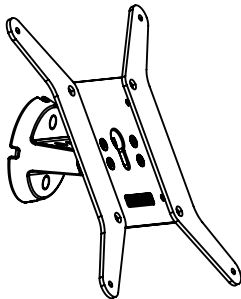

IN THE BOX



M4 7 X 10mm
Phillips Flat Head Screw



M4 7 X 10mm
Phillips Pan Head Screw



VESA 100x100 to
200x200 Adapter