


Two Scales - Brix and Beer Wort Specific Gravity

Simple to operate and provides quick, accurate measurements for the Specific Gravity of beer wort

Key Features

- Large, Sharp Display Scales with high contrast
- High-quality optical glass material for consistent, accurate readings
- Durable, industrial-grade design with non-roll stand feature to keep unit secure on flat surfaces
- Tactical, non-slip Rubber Grip on body to block transmission of hand heat reducing temperature effects
- Prism encased in all-metal housing allowing sample and prism to reach temperature equilibrium quickly
- Five-Year Warranty

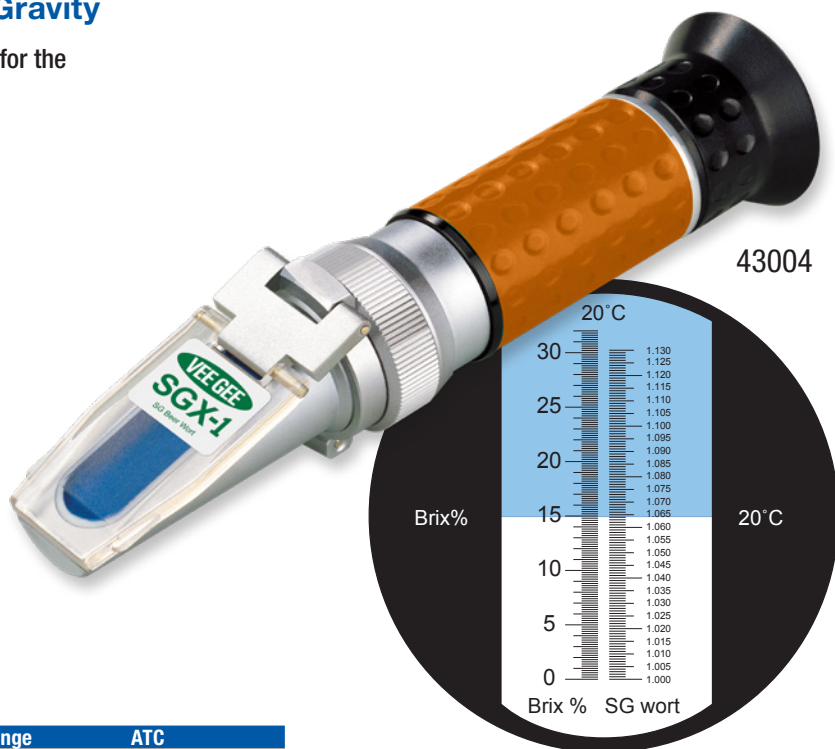

| Item No. | Model No. | Brix Range | Specific Gravity Range | ATC |
|----------|-----------|------------|------------------------|-----|
| 43004 | SGX-1 | 0 to 32% | 1.000 to 1.130 | Yes |

Replacement Parts

| | |
|-------------|---|
| 43RP-008 | Soft Fabric Carrying Case for all Handheld Refractometers |
| 45000-OS200 | Refractometer Standard, Water-based, 0.00% Brix 1.33297 nD (20°C), 7.4 mL/0.25 oz |
| 3000-DLSGX1 | Replacement Daylight Plate Kit, for Model SGX-1 refractometer |

Specifications

| | |
|------------------|--|
| Range | Brix / Specific Gravity: 0 to 32% / 1.000 to 1.130 |
| Resolution | Brix / Specific Gravity: 0.2% / 0.001 |
| Accuracy | Brix / Specific Gravity: $\pm 0.2\%$ / ± 0.001 |
| ATC Range | 10-30°C (50-86°F) |
| Dimensions | 1.6 x 1.6 x 6.5 in (4 x 4 16.5 cm) |
| Weight. | 235 g (8.3 oz) |
| Max Sample Temp. | 90° C (194° F) |

Package Includes

| |
|-----------------------------|
| Beer Wort Refractometer |
| Vinyl storage/carrying case |
| One transfer pipet |
| Calibration screwdriver |
| Operation manual |