

# MULTI-USE LOGGER WITH DISPLAY



**LogTag<sup>®</sup>**

**UTRED-16F**  
USB External Probe Temperature  
Logger with Display




The LogTag® UTRED-16F is an affordable & reliable USB temperature recorder, measures and stores real time temperature readings over a measurement range of -40°C to +99°C (-40°F to 210°F).

The LogTag® UTRED-16F comes with advanced temperature recorder features of a 16,000 log memory and can be used with all external probes from the ST100 range, and the extension cable. It complies with relevant international standards for temperature monitoring devices, such as FCC, CE, IC and RCM.

## Accessories



*Glycol Buffer*  
Not Included

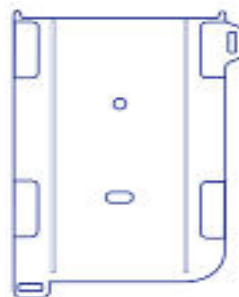

*Wall Mount*  
Not Included



*External Probe*  
Not Included (Required)

Probes are available with a 1.5m or 3m cable.  
E.g. ST100J-15 for 1.5m or ST100J-30 for 3m cable.

### Compatible probes below:

|               |                                                 |
|---------------|-------------------------------------------------|
| <b>ST100J</b> | 40mm tip length, ø3.2mm.                        |
| <b>ST100K</b> | 65mm tip length, ø3.2mm.                        |
| <b>ST100L</b> | 90mm tip length, ø3.2mm.                        |
| <b>ST100S</b> | 22mm tip length, ø5mm.                          |
| <b>ST100T</b> | 105mm tip length, ø5mm.                         |
| <b>ST100H</b> | Handled with 105mm tip length, ø5mm.            |
| <b>ST100B</b> | Untipped (bare sensor).                         |
| <b>STX50</b>  | 5 Meter extension cable for ST10/ST100 sensors. |

# Features

---



Records temperature from -40°C to +99°C.



Can be connected to any computer with a USB port. No interface cradle required.



Up to 16,000 recordings - enough for 168 days at 15 minute logging.



Fixed battery of 1 year storage, 2 years of normal use.



Read current temperature and latest alarm conditions at a glance.



Creates a comprehensive data file compatible with LogTag Analyzer operating software.



Display showing temperature and alarm status of up to six alarms.



Auto-pause function suspends alarm and statistic processing when the external sensor is unplugged.



Automatic generation of a PDF report as a permanent record of the data.

# Applications

---



*Pharmaceuticals*



*Produce*



*Healthcare*



*Chemicals*

# Specifications

|                                             |                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Product Model</b>                        | UTRED-16F (Fixed Battery).                                                                                                                                                                                                                                                                                                                                                            |
| <b>Sensor Measurement Range</b>             | -40°C to +99°C (-40°F to 210°F).                                                                                                                                                                                                                                                                                                                                                      |
| <b>Operating Temperature Range</b>          | -30°C to +60°C (-22°F to +140°F).                                                                                                                                                                                                                                                                                                                                                     |
| <b>Storage Temperature Range</b>            | 0°C to +40°C (32°F to +104°F).                                                                                                                                                                                                                                                                                                                                                        |
| <b>Rated Temperature Reading Resolution</b> | Better than 0.1°C (0.2°F) for -30°C to +60°C (-22°F to +140°F).<br>Better than 0.2°C (0.4°F) for -40°C to -30°C (-40°F to -22°F).<br>Better than 0.5°C (0.9°F) for +60°C to +99°C (+140°F to +210°F).<br><i>LogTag Analyzer® currently displays to one decimal place of °C or °F. The native resolution is what is stored in the LogTag®.</i>                                         |
| <b>Rated Temperature Reading Accuracy</b>   | Better than ±0.5°C (±0.9°F) for -20°C to +40°C (-4°F to +104°F), typically ±0.3°C (0.6°F).<br>Better than ±0.8°C (±1.4°F) for -40°C to -20°C (-40°F to -4°F), typically ±0.5°C (0.9°F).<br>Better than ±0.8°C (±1.4°F) for +40°C to +70°C (+104°F to +158°F), typically ±0.7°C (1.3°F).<br>Better than ±1.2°C (±2.2°F) for +70°C to +99°C (+158°F to +210°F), typically ±1°C (1.8°F). |
| <b>Recording Capacity</b>                   | 16,129 temperature readings.<br>112 days @ 10min logging, 168 days @ 15min logging. Statistics memory (for display on LCD): Max/Min values and alarm duration values.                                                                                                                                                                                                                 |
| <b>Sampling Interval</b>                    | Configurable from 30 seconds to 18 hours.                                                                                                                                                                                                                                                                                                                                             |
| <b>Logging Start Options</b>                | Push button start or specific date & time. Optional start delay of up to 72 hours.                                                                                                                                                                                                                                                                                                    |
| <b>Recording Indication</b>                 | "REC" symbol on LCD                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Alarms</b>                               | Three configurable upper and three configurable lower alarms.                                                                                                                                                                                                                                                                                                                         |
| <b>Download Time</b>                        | Typically with full memory (16,129 readings) in less than 30 seconds from time of insertion to availability of PDF report.<br>Typically less than 10 seconds from time of insertion to availability of LTD file in LogTag® Analyzer (if configured)                                                                                                                                   |
| <b>Environmental</b>                        | IP61 (when vertically mounted or hung with USB dust-cap in place).                                                                                                                                                                                                                                                                                                                    |
| <b>Power Source</b>                         | CR2450 3V LiMnO <sub>2</sub> (Fixed battery).                                                                                                                                                                                                                                                                                                                                         |
| <b>Battery Life</b>                         | 1 year storage, 2 years of normal use (based on 15 minute logging, download data monthly).                                                                                                                                                                                                                                                                                            |
| <b>Real Time Clock</b>                      | Built-in real time clock.<br>Rated accuracy ±25ppm @ 25°C (equivalent to 2.5 seconds/day).<br>Rated temperature coefficient is -0.034 ±0.006ppm/°C (i.e typically +/- 0.00294 seconds/day/°C).                                                                                                                                                                                        |
| <b>Connection Interface</b>                 | USB 2.0, A-type plug.                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Software</b>                             | PDF Reader, LogTag® Analyzer 3.1.9 or higher.                                                                                                                                                                                                                                                                                                                                         |
| <b>PDF Report</b>                           | One page report with trip and alarm summary. Multi-page report with list of readings, including date and time.                                                                                                                                                                                                                                                                        |
| <b>Size</b>                                 | 93mm(H) x 54.5mm(W) x 8.6mm(T) including protective USB cap.                                                                                                                                                                                                                                                                                                                          |
| <b>Weight</b>                               | 39g.                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Case Material</b>                        | Polycarbonate.                                                                                                                                                                                                                                                                                                                                                                        |

