



# F-2001M\_J(Z)(3)(-C)

## Modular Ice Machine

F-2001M\_J(Z)(3)(-C)  
07/02/24  
Item # 13255

W x D x H  
30" x 27 1/2" x 34 7/16"

**F-2001MWJ**  
Water-Cooled Flaker

**F-2001MRJZ**  
Remote Air-Cooled Flaker 1-Phase  
Shown on optional bin B-700

**F-2001MRJZ3**  
Remote Air-Cooled Flaker 3-Phase

**F-2001MRJZ-C**  
Remote Air-Cooled Cubelet



Item #: \_\_\_\_\_  
Project: \_\_\_\_\_  
Qty: \_\_\_\_\_  
AIA#: \_\_\_\_\_

## Features

- ▶ Durable stainless steel exterior
- ▶ Advanced CleanCycle24™ design 
- ▶ Stainless steel auger with greaseless bearing

- Flaker - Up to 2098 lbs. of ice production per 24 hours
- Cubelet - Up to 1832 lbs. of ice production per 24 hours
- Mount two units, side-by-side, in only 60" of floor space for double the amount of ice production
- 2-second flush cycle every hour
- Flush cycle removes sediment for cleaner ice
- R-404A Refrigerant

### Available on Bins:

B-250SF B-700SF B-900SF B-1300SS B-1650SS\*  
B-500SF B-800SF B-1150SS B-1500SS\*

Top kit may be required. See Bin Spec Sheets. \*Two unit application only.

### Warranty:

3 Year Parts & Labor on entire machine. 5 Year Parts on Compressor; air-cooled condenser coil. Valid in United States, Canada, Puerto Rico and U.S. Territories. Contact factory for warranty in other countries.


|           |                   | ICE PRODUCTION |                                                                 |      | WATER USAGE                               |                                             | ELECTRICAL                            |                                    |          |               |                                        |                              |                                     |                             |
|-----------|-------------------|----------------|-----------------------------------------------------------------|------|-------------------------------------------|---------------------------------------------|---------------------------------------|------------------------------------|----------|---------------|----------------------------------------|------------------------------|-------------------------------------|-----------------------------|
| Condenser |                   | Model          | Air / Water Temp<br>Lbs. per 24 hours<br>70°/ 50°F    90°/ 70°F |      | Potable<br>Gal. per 100 lbs.<br>90°/ 70°F | Condenser<br>Gal. per 100 lbs.<br>90°/ 70°F | kWh Used<br>per 100 lbs.<br>90°/ 70°F | Min. Circuit/<br>Max. Fuse<br>Size | Amperage | Voltage       | Circuit<br>Wires<br>(including ground) | Heat<br>Rejection<br>BTU/hr. | Refrigerant<br>Charge Amount        | Net / Ship<br>Weight (lbs.) |
| 1 Phase   | Water<br>Flaker   | F-2001MWJ      | 2043                                                            | 1840 | 12.0                                      | 109                                         | 3.19                                  | 30A                                | 16.4A    | 208-230V/60/1 | 4                                      | 19,500                       | 2 lbs. 0.1 oz.                      | 310 / 342                   |
|           | Remote<br>Flaker  | F-2001MRJZ     | 2073                                                            | 1660 | 12.0                                      | N/A                                         | 3.81                                  | 30A                                | 19.9A    | 208-230V/60/1 | 4                                      | 16,500                       | 8 lbs. 2.5 oz.<br>(15 lbs. 14 oz.)† | 326 / 360                   |
|           | Remote<br>Cubelet | F-2001MRJZ-C   | 1832                                                            | 1500 | 12.0                                      | N/A                                         | 4.35                                  | 30A                                | 19.9A    | 208-230V/60/1 | 4                                      | 20,300                       | 8 lbs. 2.5 oz.<br>(15 lbs. 14 oz.)† | 326 / 360                   |
| 3 Phase   | Remote<br>Flaker  | F-2001MRJZ3    | 2098                                                            | 1675 | 12.0                                      | N/A                                         | 3.90                                  | 20A                                | 18.1A    | 208-230V/60/3 | 4                                      | 19,500                       | 8 lbs. 2.5 oz.<br>(15 lbs. 14 oz.)† | 326 / 360                   |

<sup>†</sup> (with condenser)


Power cord not included. Must be hard-wired at site.

### Cube Dimensions\*

Flaked  
F-2001M\_J(Z)

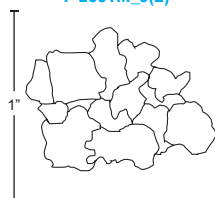

Cubelet  
F-2001MRJ(Z)-C

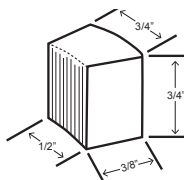

\* approximate size in inches, image not to scale

### Operating Limits

- Ambient Temp Range 45 - 100°F
- Water Temp Range 45 - 90°F
- Water Pressure 10 - 113 PSIG
- Voltage Range 187-253V
- If GFCI is required, a GFCI breaker MUST be used in lieu of GFCI receptacle

### Service

- Panels easily removed and all components accessible for service.
- Allow 6" (15 cm) clearance at rear and sides for proper air circulation and ease of maintenance/service. Allow 24" (61 cm) clearance at top for removal of auger.

### Plumbing

- Ice maker Water Supply Line: Minimum 1/4" Nominal ID Copper Water Tubing or Equivalent
- Ice maker Drain Line: Minimum 3/4" Nominal ID Hard Pipe or Equivalent

### Water-Cooled Model (Lines Must Be Independent of Ice maker)

- Condenser Water Supply Line: Minimum 1/4" Nominal ID Copper Water Tubing or Equivalent
- Condenser Drain/Return Line: Minimum 1/4" Nominal ID Hard Pipe (open drain system) or Copper Water Tubing (closed loop system) or Equivalent

Hoshizaki reserves the right to change specifications without notice.




# F-2001M\_J(Z)(3)(-C)


## Modular Ice Machine

F-2001M\_J(Z)(3)(-C)  
07/02/24  
Item # 13255

FRONT VIEW

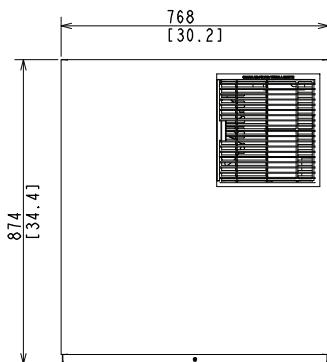


WATER-COOLED

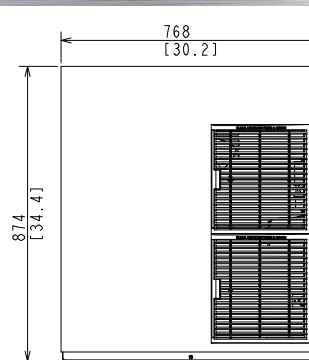


REMOTE AIR-COOLED

SIDE VIEW

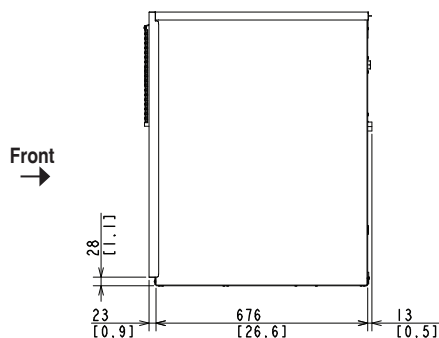


WATER-COOLED

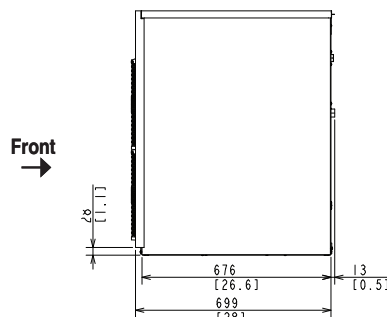


REMOTE AIR-COOLED

REAR VIEW

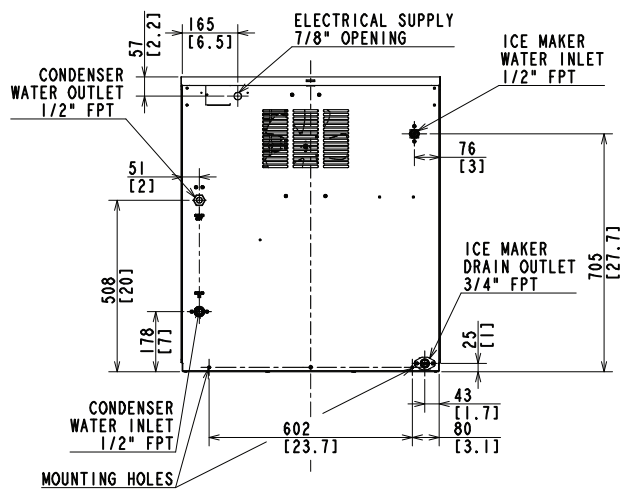


WATER-COOLED

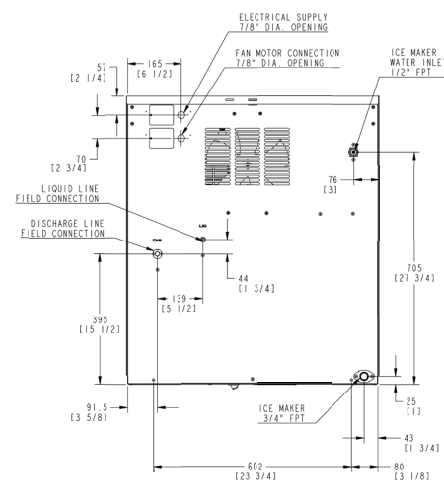


REMOTE AIR-COOLED

BOTTOM VIEW

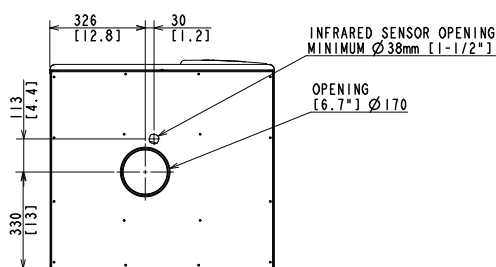


WATER-COOLED

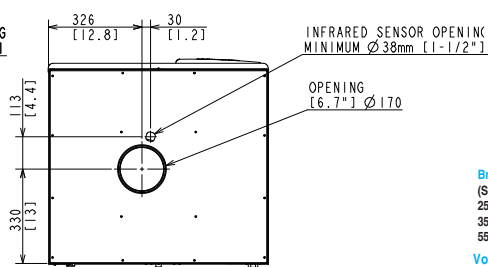

REMOTE AIR-COOLED

URC-22FZ Remote Condenser (Sold Separately)  
(W x D x H) 46 3/8 x 14 1/16 x 40 1/2  
For Use with F-2001MRJZ(3)(-C)

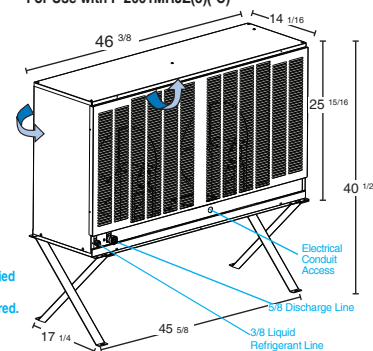

Brazed Line Sets  
(Sold Separately)  
25' HS-5323  
35' HS-5324  
55' HS-5325

Voltage supply for the URC  
Remote Condenser is supplied  
from the Ice Maker.  
No additional circuit is required.