



ARS15MLMC



72" x 23.38" x 24.38" (H x W x D)

Purpose-built all-refrigerator for breast milk storage with 7 adjustable shelves, antimicrobial silver-ion handle, and hospital grade cord with 'green dot' plug

Highlights:

- Designed for use in NICUs, hospitals, maternity wards, lactation rooms, mothers' suites, and other facilities
- Purpose-built for environments complying with Section 4207 of the Patient Protection and Affordable Care Act
- Powder-coated handle with naturally occurring silver ions to help reduce germ spread


Product Features:


Purpose-built design	Designed and purpose-built for breast milk storage
Adjustable plastic-coated wire shelves	Multiple shelf positions spaced at 1/2" for improved air circulation and storage
Antimicrobial silver ion-coated handle	Powder-coated handle with naturally occurring silver ions to help reduce the spread of germs
Adjustable temperature	Intuitive controls let you adjust the interior temperature between 33 to 40°F
Microprocessor control panel	Digital controls with a large LED readout in Celsius or Fahrenheit for intuitive temperature management
Factory-installed lock	Keyed locked near top of door for added security (2 keys included)
Access port (probe)	Includes a pre-installed 1/2" probe hole in the right interior wall to allow easier connection to user-provided monitoring equipment
Remote alarm contacts	Electronic controller is equipped with a volt-free contact for alarm forwarding to an external remote system (contacts located in the external rear of the unit)
Resettable min/max temperature	Display provides a readout of unit's high and low temperatures updated in 15 minute increments

ARS15MLMC Specifications:

Overview	
Nominal Height	72.0" (183 cm)
Height of Cabinet	72.0" (183 cm)
Nominal Width	24.0" (61 cm)
Width	23.38" (59 cm)
Width with Door Open	23.88" (61 cm)
Nominal Depth	25.0" (64 cm)
Depth	24.38" (62 cm)
Depth with Handle	26.13" (66 cm)
Depth with door at 90°	46.5" (118 cm)
Capacity	15.0 cu.ft. (425 L)
Defrost Type	Automatic
Door	White
Cabinet	White
US Electrical Safety	ETL
Canadian Electrical Safety	ETL-C
Amps	1.4
Voltage/Frequency	115 V AC/60 Hz
Weight	200.0 lbs. (91 kg)
Parts & Labor Warranty	2 Years
Compressor Warranty	5 Years
UPC	761101066585
Refrigerator Features	
Door Swing	RHD
Reversible	Yes
Shelf Type	Wire
Shelf Qty	7
Adjustable Shelves	Yes
Thermostat Type	Digital
Fan Type	Interior
Refrigerant Type	R600a
Refrigerant Amount	2.65oz.
Interior Light	Yes
Temperature Range	33 to 40°F
Sound Level	37.5 dB
Dimensions	
Interior Height	63.25" (161 cm)
Interior Width	20.0" (51 cm)

Interior Depth	17.0" (43 cm)
Compressor Step Height	6.5" (17 cm)
Compressor Step Width	20.0" (51 cm)
Compressor Step Depth	5.0" (13 cm)

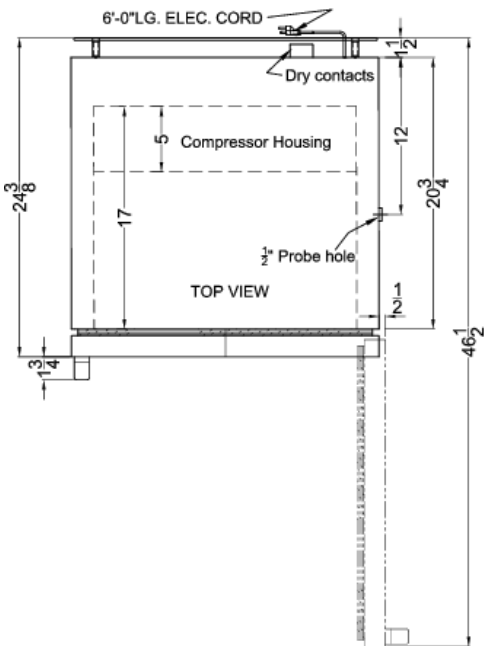

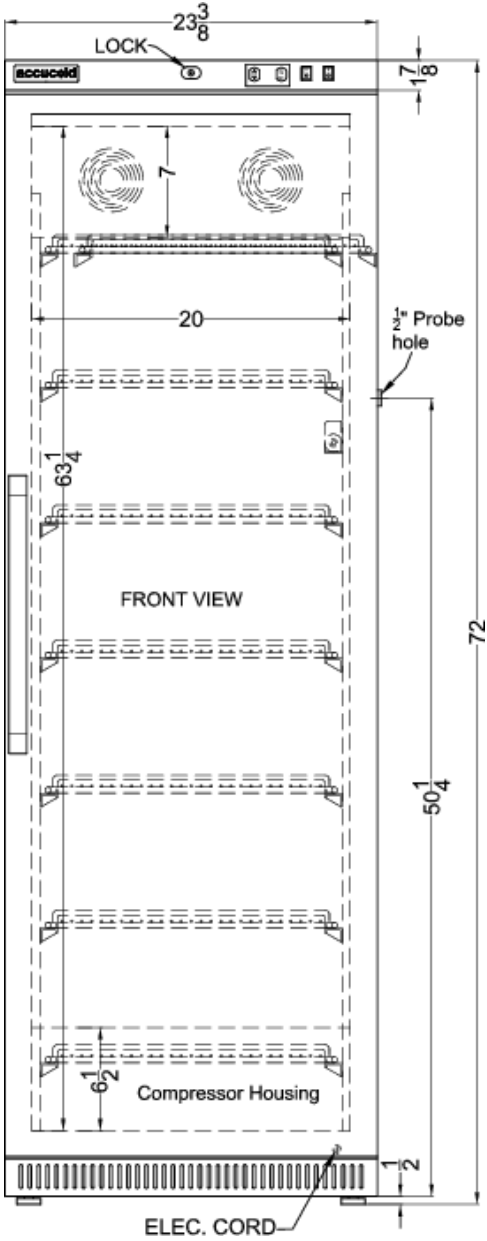

ARS15MLMCLK



72" x 23.38" x 24.38" (H x W x D)

Purpose-built all-refrigerator for breast milk storage with 8 interior locking compartments, antimicrobial silver-ion handle, and hospital grade cord with 'green dot' plug

Highlights:

Purpose-built for environments complying with Section 4207 of the Patient Protection and Affordable Care Act

Designed for use in NICUs, hospitals, maternity wards, lactation rooms, mothers' suites, and other facilities

Meets CDC guidelines with a temperature range of 33 to 40°F

Product Features:

Purpose-built design	Designed and purpose-built for breast milk storage
Locking compartments	Eight interior lockers sized at 11" H x 9 3/8" W x 15 1/4" D accommodate standard and oversized nursing bottles and travel bags for individual privacy
Combination locks	Allows each mother her own access system for added security
Combination lock override	Locks can be reset or accessed by staff/managers as needed (2 keys included)
Antimicrobial silver ion-coated handle	Powder-coated handle with naturally occurring silver ions to help reduce the spread of germs
Adjustable temperature	Intuitive controls let you adjust the interior temperature between 33 to 40°F
Microprocessor control panel	Digital controls with a large LED readout in Celsius or Fahrenheit for intuitive temperature management
Factory-installed lock	Keyed locked near top of door for added security (2 keys included)
Access port (probe)	Includes a pre-installed 1/2" probe hole in the right interior wall to allow easier connection to user-provided monitoring equipment

ARS15MLMCLK Specifications:

Overview	
Nominal Height	72.0" (183 cm)
Height of Cabinet	72.0" (183 cm)
Nominal Width	24.0" (61 cm)
Width	23.38" (59 cm)
Width with Door Open	23.88" (61 cm)
Nominal Depth	25.0" (64 cm)
Depth	24.38" (62 cm)
Depth with Handle	26.13" (66 cm)
Depth with door at 90°	46.5" (118 cm)
Capacity	15.0 cu.ft. (425 L)
Defrost Type	Automatic
Door	White
Cabinet	White
US Electrical Safety	ETL
Canadian Electrical Safety	ETL-C
Amps	1.4
Voltage/Frequency	115 V AC/60 Hz
Weight	240.0 lbs. (109 kg)
Parts & Labor Warranty	2 Years
Compressor Warranty	5 Years
UPC	761101066592
Refrigerator Features	
Door Swing	RHD
Reversible	Yes
Shelf Type	Lockers
Thermostat Type	Digital
Fan Type	Interior
Refrigerant Type	R600a
Refrigerant Amount	2.65oz.
Interior Light	Yes
Temperature Range	33 to 40°F
Sound Level	37.5 dB
Dimensions	
Interior Height	63.25" (161 cm)
Interior Width	20.0" (51 cm)
Interior Depth	17.0" (43 cm)
Compressor Step Height	6.5" (17 cm)

Compressor Step Width	20.0" (51 cm)
Compressor Step Depth	5.0" (13 cm)

