


Assembly Instructions


1

(DEFAULT)
PORTRAIT ORIENTATION

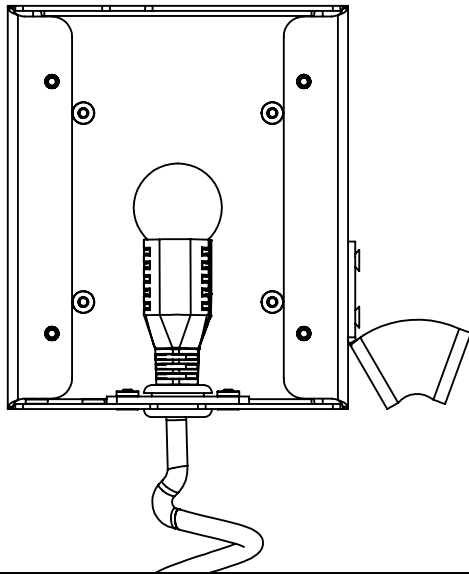

OR


(OPTION #2)
LANDSCAPE ORIENTATION

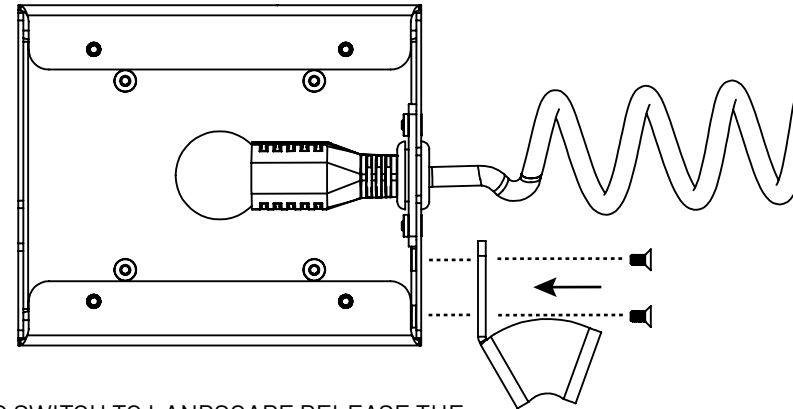

TO SWITCH TO LANDSCAPE RELEASE THE
2 SCREWS, M4 X 8mm PIN - IN - TORX FLAT HEAD,
AND MOUNT CABLE HOLDER UNDERNEATH COILED
POWER CORD WITH THE SAME SCREWS.


2

CONNECT BOX TO VESA 75mm
HOLE PATTERN FROM BEHIND
USING M4 X 8mm PIN - IN - TORX
BUTTON HEAD SCREWS (PROVIDED).

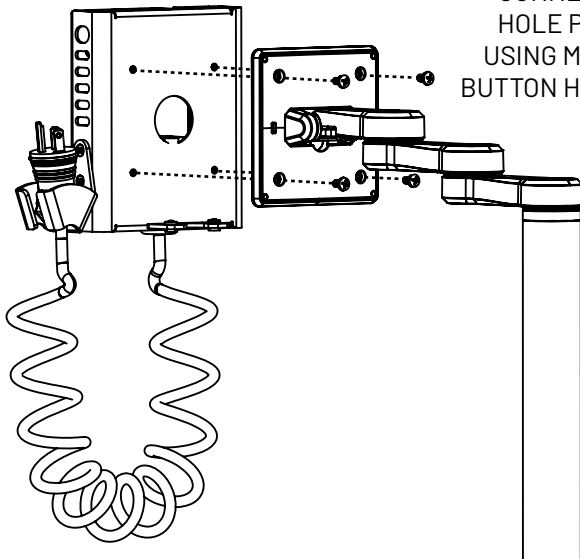


3

PLUG CHARGE CUBE INTO
COILED POWER CORD AND
ROUTE CHARGING CABLE
THROUGH CABLE MANAGEMENT
HOLE ON ENCLOSURE.

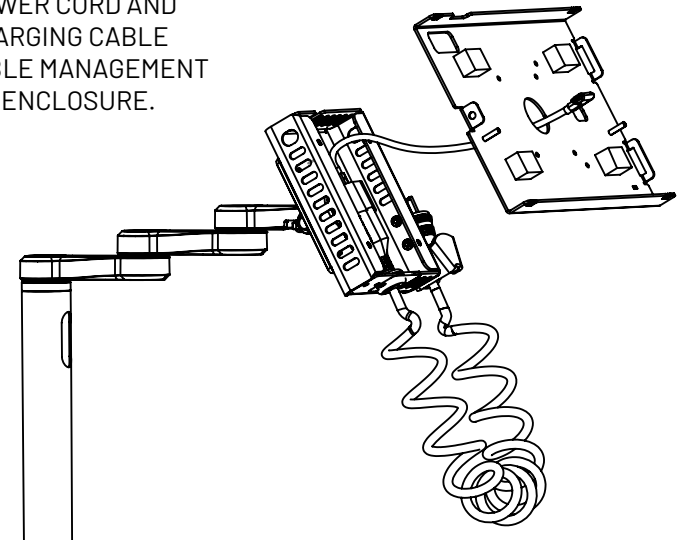


4

SECURE THE BACK OF THE ENCLOSURE TO VESA 100mm HOLE PATTERN WITH 4 M4 X 8mm PHILLIPS ROUND HEAD SCREWS (PROVIDED IN STAND HARDWARE KIT).

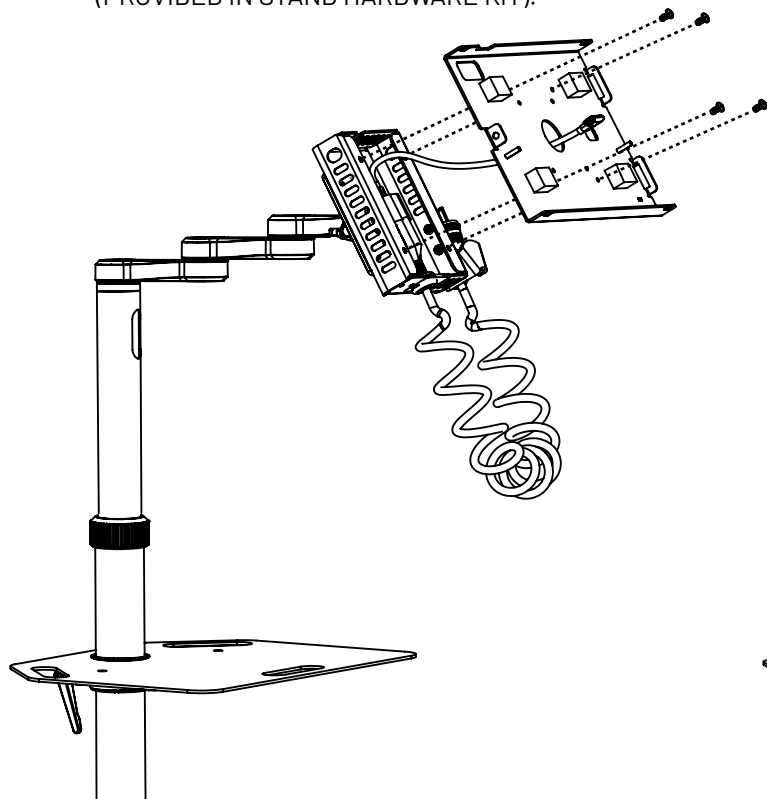


5

ATTACH CHARGING CABLE TO THE TABLET, LEAVE A SMALL LOOP OF CABLE BENEATH THE TABLET

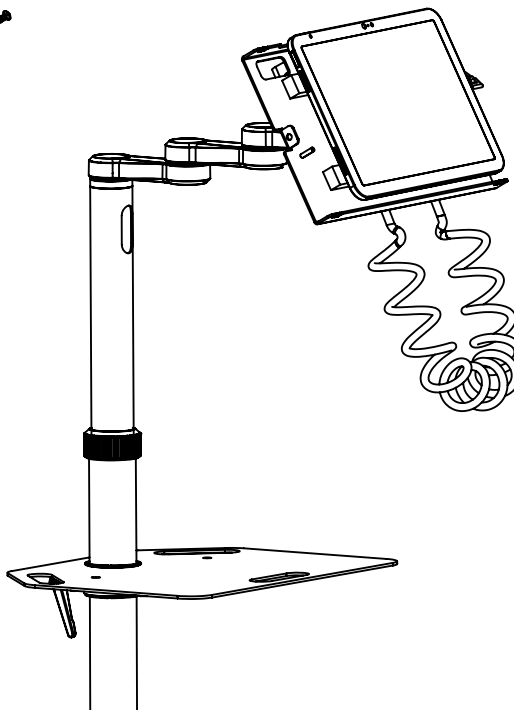


6

INSTALL THE ENCLOSURE TOP PLATE/VESA MOUNT PER THEIR INSTRUCTIONS.

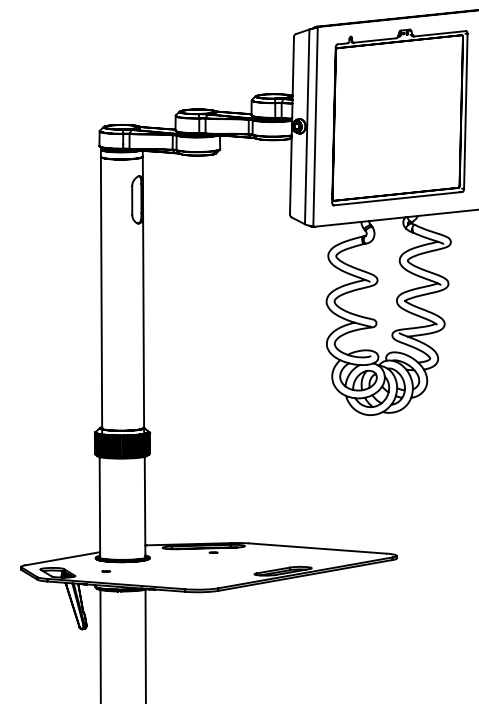


IN THE BOX



T20 PIN -IN - TORX L-Wrench
T15 PIN - IN - TORX L-Wrench



M4 X 8mm
Pin-In-Torx Button Head Screws

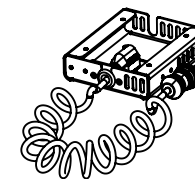

PlusPlug Security Charging Box
with Medical Grade Cable