


PowerMove Connector

Assembly Instructions

COMPULOCKS


1

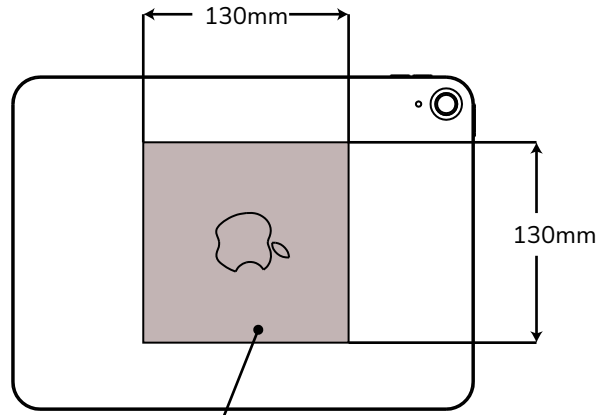


USING ALCOHOL PAD PROVIDED,
CLEAN 130mm SQUARE AREA CENTERED ON THE BACK OF THE TABLET.
ALLOW TO AIR DRY

2

SELECT THE ORIENTATION
OF THE CONNECTOR ON THE TABLET

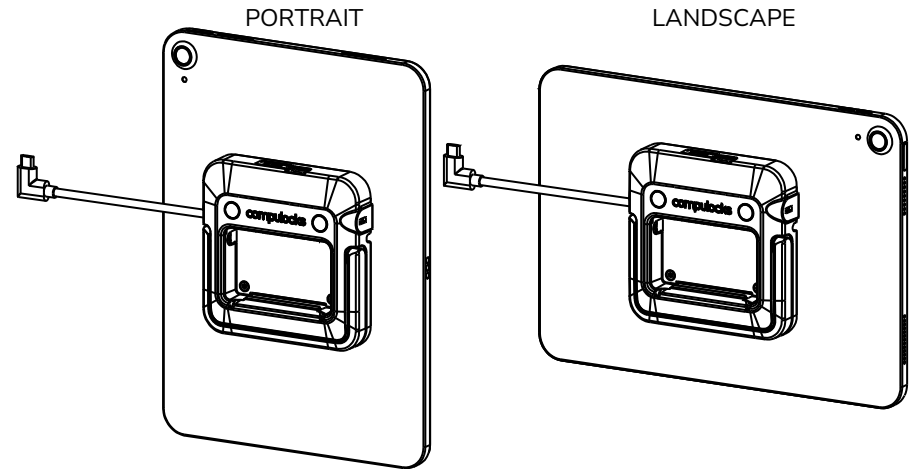


3

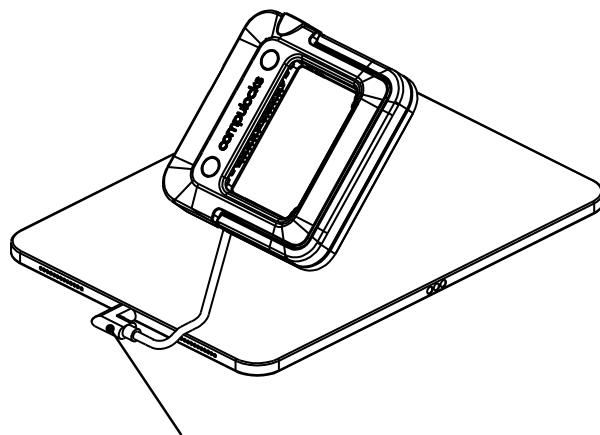

INSTALL RIGHT ANGLE USB-C CABLE
AS SHOWN


4

PASS CONNECTOR THROUGH CASE*
AND INSTALL CASE ON TABLET

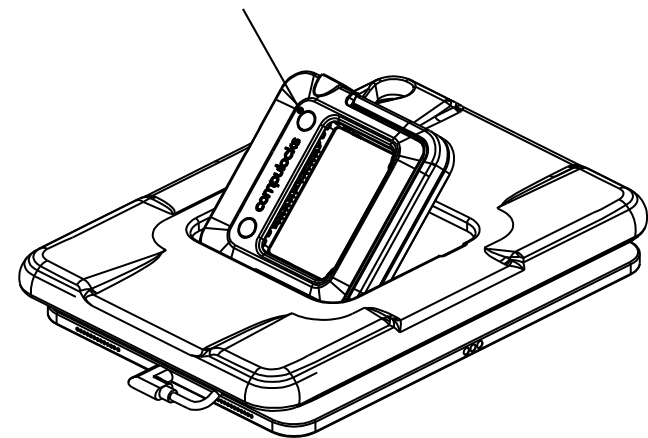


*CASE SOLD SEPARATELY

5

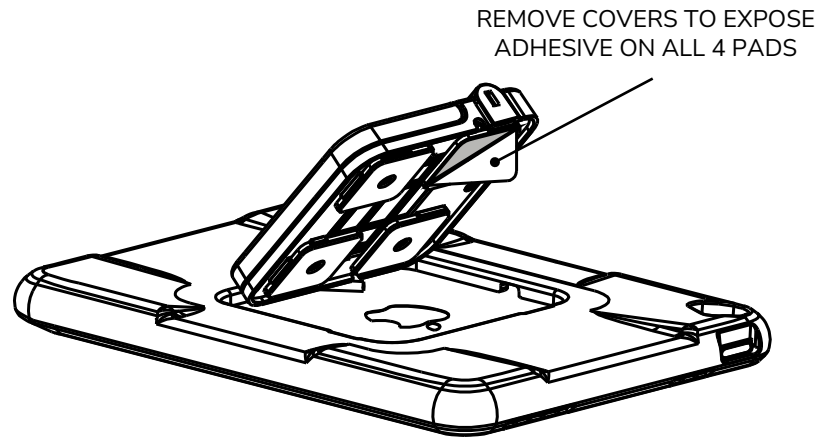


NOTE:
TABLET AND CONNECTOR SHOULD BE AT
ROOM TEMPERATURE FOR BEST RESULTS

6

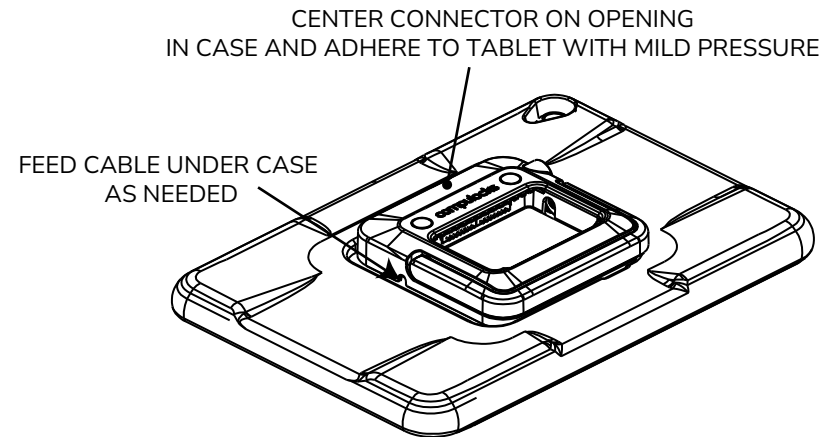


FOR BEST PERFORMANCE ALLOW
CONNECTOR TO BOND TO TABLET FOR 12 HOURS.

IN THE BOX

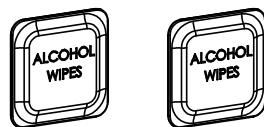

Alcohol Wipes

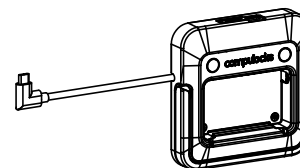


PowerMove Connector


Mounting Options

1 Floor Stand Mounting

USE M4 x 10mm PIN-IN-TORX
BUTTON HEAD SCREWS PROVIDED.
TIGHTEN USING PROVIDED
TORX SCREWDRIVER

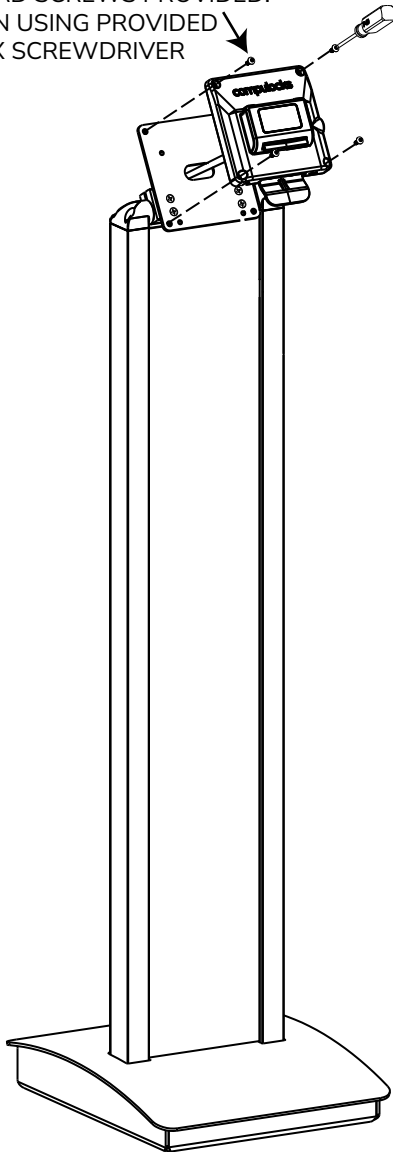


2 Counter Stand Mounting

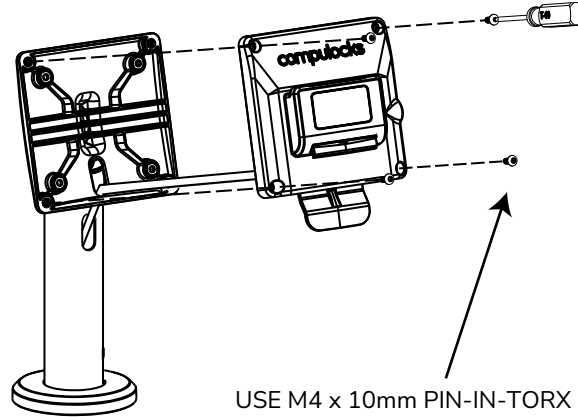


USE M4 x 10mm PIN-IN-TORX
BUTTON HEAD SCREWS PROVIDED.
TIGHTEN USING PROVIDED
TORX SCREWDRIVER

3 Wall Arm Mounting

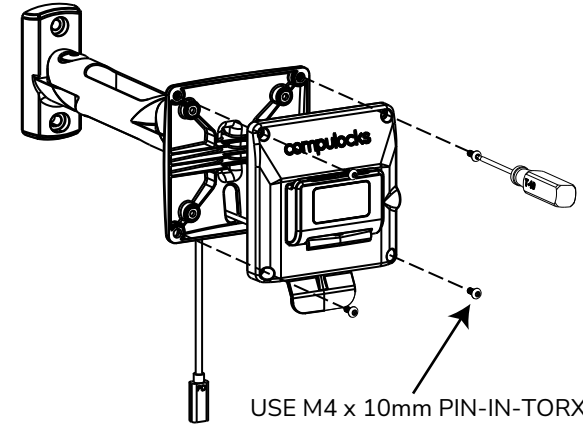


USE M4 x 10mm PIN-IN-TORX
BUTTON HEAD SCREWS PROVIDED.
TIGHTEN USING PROVIDED
TORX SCREWDRIVER

4 Direct Mounting To Wall

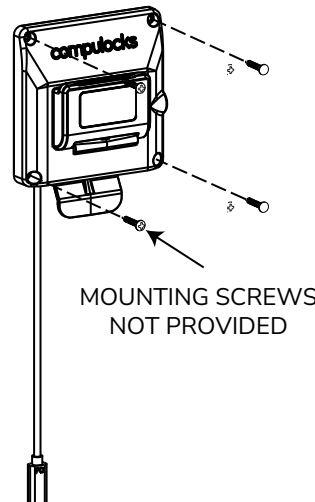

MOUNTING SCREWS
NOT PROVIDED


Optional Add-On: Portrait To Landscape Rotation Plate

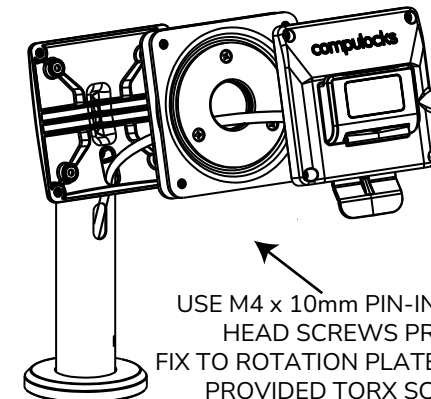

USE M4 x 10mm PIN-IN-TORX BUTTON
HEAD SCREWS PROVIDED TO
FIX TO ROTATION PLATE. TIGHTEN USING
PROVIDED TORX SCREWDRIVER.
USE SCREWS PROVIDED WITH ROTATION PLATE
TO SECURE TO STAND or ARM


Placing Tablet with Connector to Dock Station

1

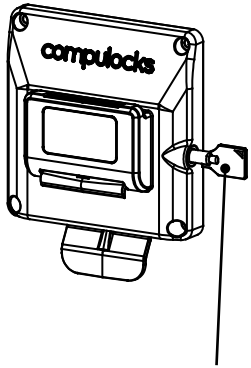


USE KEY TO UNLOCK THE LOCK.
REMOVE KEY

2

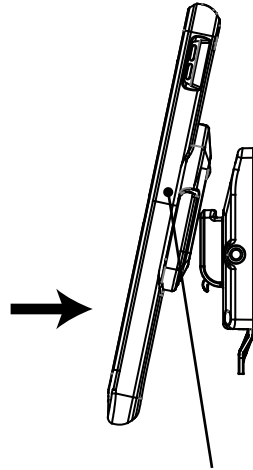


ALIGN CONNECTOR TO DOCK STATION

3

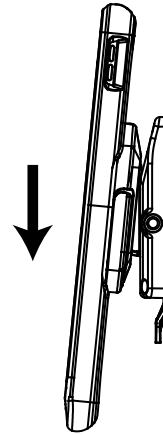

APPLY LIGHT PRESSURE.
LATCH WILL ENGAGE


4

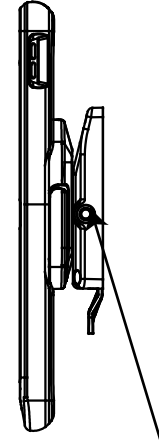

PUSH LOCK BUTTON TO SECURE
TABLET TO DOCK STATION


Removing Tablet with Connector from Dock Station

1

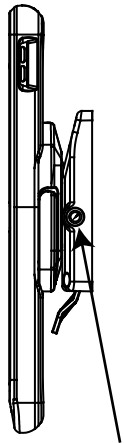


PRIOR TO PULLING LATCH,
UNLOCK LOCK USING KEY

2

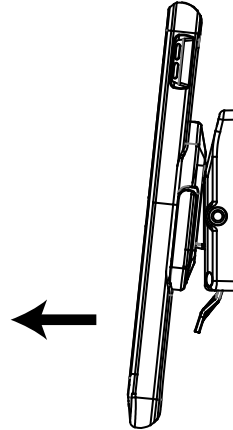

PULL LATCH FORWARD

3

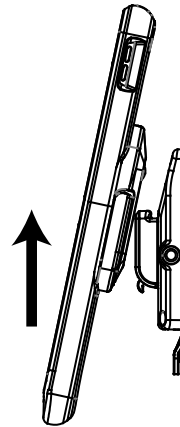


GENTLY PULL UP TO RELEASE


4



Tablet Charge PD Compatible

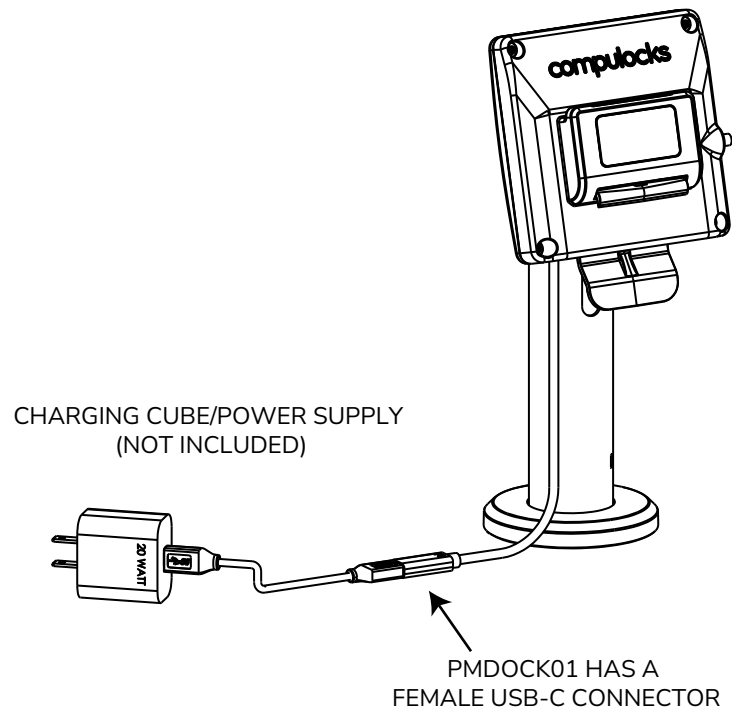


Tablet Data and Charge PD Compatible

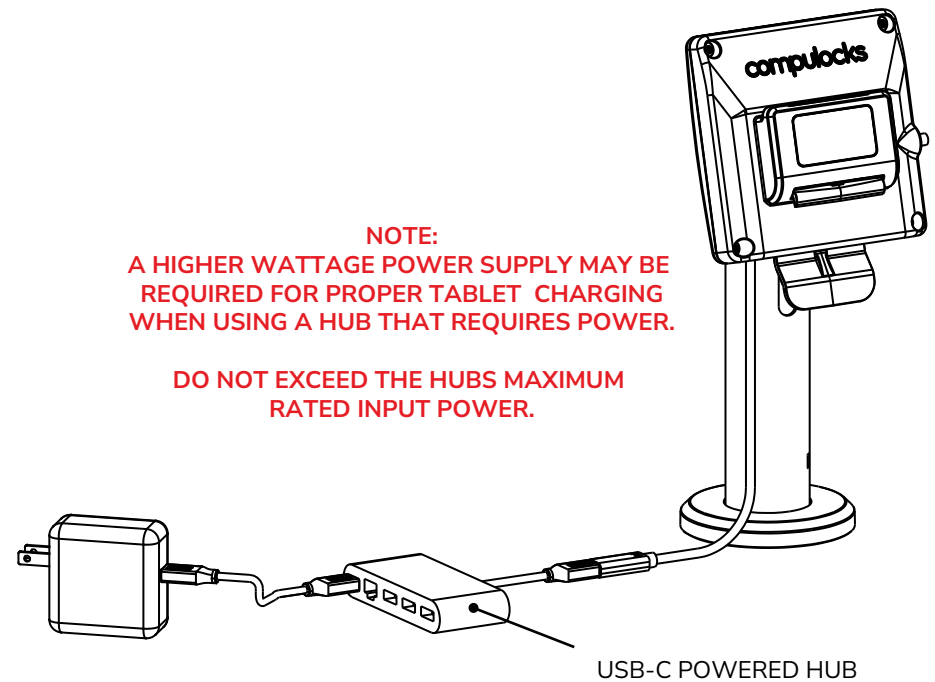


IN THE BOX



Keys



Hardware Kit

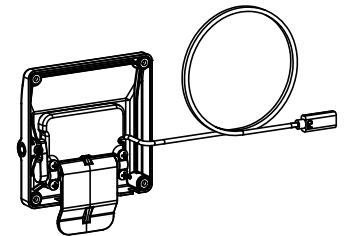

PowerMove Dock Station